

Зип Общепит

vsezip.ru

+7(812)987-08-81




071BM

Edition 20110101-

Зип Ощепит

vsezip.ru

+7(812)987-08-81

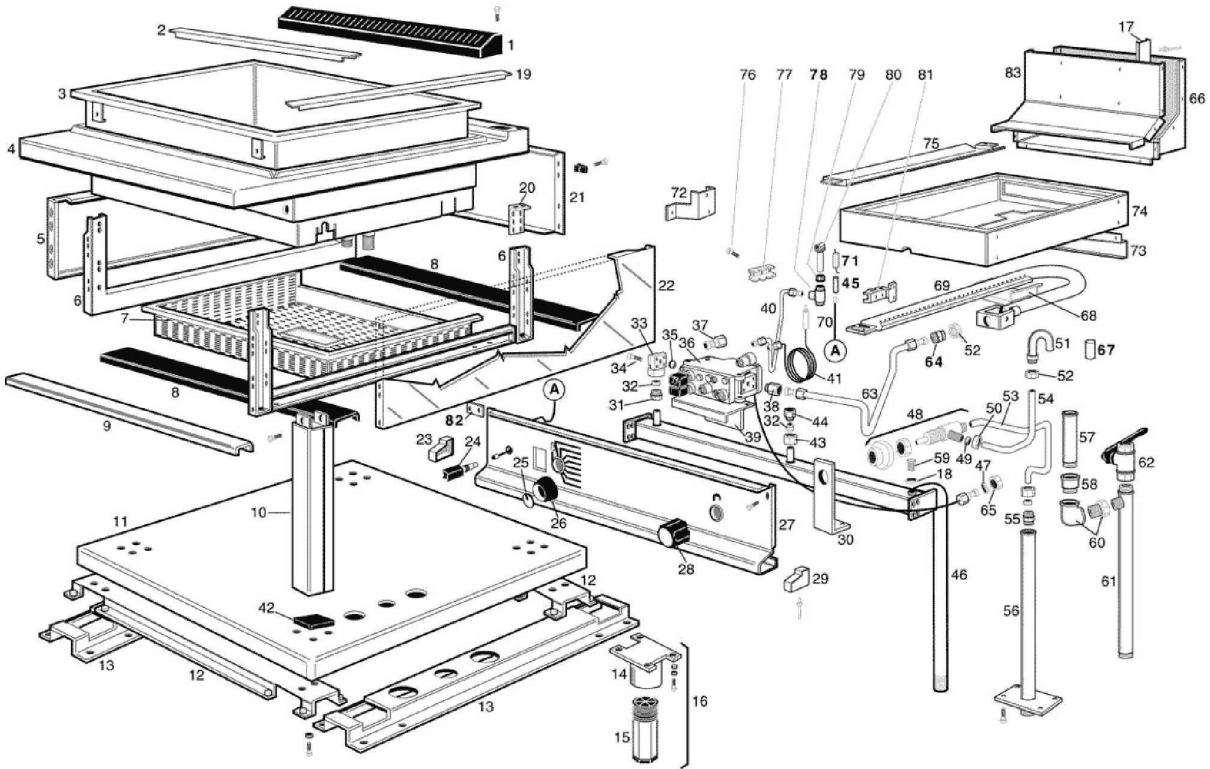

Pos	Code	Description	Info
001	35A9090	FLUE GUARD	01/11/1995-
002	35U7530	"U" BRACKET	01/11/1995-
003	30W2880	WELL ASSEMBLY	01/11/1995-
004	30M2650	TOP ASS. Y	01/11/1995-
005	35A8220	LH PANEL	01/11/1995-
006	30T1780	SIDE FRAME ASS. Y	01/11/1995-
007	35Q5900	LOWER GUARD	01/11/1995-
008	35U3520	FRAME FRONT CROSS SECT.	01/11/1995-
009	35U7120	HANDLE SECTION	01/11/1995-
010	30A1691	RISER	01/11/1995-
011	35M3940	UNDER SHELF	01/11/1995-
012	35V2810	LOWER CROSS	01/11/1995-
013	35U7371	MEMBER "OMEGA" BRACKET	01/11/1995-
014	36D9360	FOOT HOUSING ASS. Y	01/11/1995-
015	36D9350	STAINLESS STEEL FOOT	01/11/1995-
016	36D9340	STAINLESS STEEL FOOT ASS.Y	01/11/1995-
017	35U5370	"U" BRACKET	01/11/1995-
018	3128460	WASHER	01/11/1995-
019	35U7350	""U"" BRACKET"	01/11/1995-
020	35U7140	"L" BRACKET	01/11/1995-
021	35A8230	REAR PANEL	01/11/1995-
022	35A8210	RH PANEL	01/11/1995-
023	36D3430	LH END SIDE	01/11/1995-
024	32T0130	PIEZO IGNITION	01/11/1995-
025	36M2800	KNOB PLATE	01/11/1995-
026	36M2580	GAS THERMOSTAT KNOB	01/11/1995-
027	35A9720	UPPER CONTROL BOARD	01/11/1995-
028	36M2642	RED RING KNOB	01/01/2011-
029	36D3420	RH END SIDE	01/11/1995-
030	35U6420	"L" BRACKET	01/11/1995-
031	36Q0710	BICONE SCREW Ø 12	01/11/1995-
032	36Q0030	BICONE Ø12X8	01/11/1995-
033	33Q2650	"ELBOW MF 3/8""	01/11/1995-
034	31B8820	SCREW TCB M4X15CROSS	01/11/1995-
035	3150770	"O" RING Ø 21	01/11/1995-
036	33A1130	GAS THERMOSTAT 20- 90° C	01/11/1995-
037	32Z1460	VALVE MAGNET	01/11/1995-
038	33Q2560	SOCKET MF 3/8"	01/11/1995-
039	35U8450	"C" BRACKET	01/11/1995-
040	35Z5910	PILOT LIGHT PIPE	01/11/1995-
041	33A1190	THERMOCOUPLE M9X1X750	05/06/2001-
042	36D3911	UPRIGHT OUTSOLE	01/11/1995-
043	36Q0050	BICONE NUT Ø 12	01/11/1995-
044	36Q0740	PLUG	01/11/1995-
045	131AA46	HOSE 8'X40	01/11/1995-
046	30Z1430	GAS MANIFOLD ASS. Y	01/11/1995-
047	3150390	"O" RING Ø 15.08	01/11/1995-
048	33D0590	"COCK 3/8""	01/11/1995-
049	36Q0080	BICONE Ø 10X6.5	01/11/1995-
050	36Q0140	BICONE NUT Ø 10	01/11/1995-
051	33Q2730	WATER SPOUT	01/11/1995-

Pos	Code	Description	Info
052	36Q1110	LOCK NUT 3/8"	01/11/1995-
053	35Z6070	PIPE	01/11/1995-
054	35Z6060	PIPE	01/11/1995-
055	33Q2740	NIPPLE M 3/8"	01/11/1995-
056	30Z1510	INLET WATER PIPE	01/11/1995-
057	35Z6720	DRAIN PIPE	01/11/1995-
058	33Q2990	SOCKET MF 3/8"-1/2"	01/11/1995-
059	31A7380	SCREW TE M5X10	01/11/1995-
060	33Q2980	"UNION ELBOW 3/8"""	01/11/1995-
061	30Z1520	DRAIN PIPE ASS. Y	01/11/1995-
062	33D0170	COCK FF 3/4"	01/11/1995-
063	35Z5890	BURNER PIPE	01/11/1995-
064	3035340	NOZZLE HOUSING	24/07/2006-
065	36Q0760	"NUT 1/4""X5"	01/11/1995-
066	35D3570	HALF FLUE REAR	01/11/1995-
067	35T0390	SPACER PIPE	01/10/1996-
068	35U6400	BURNER SUPPORT	01/11/1995-
069	34A1450	BURNER	01/11/1995-
070	32A0210	CABLE "HF" 700MM	01/11/1995-
071	32T0010	IGNITION PLUG	27/01/2010-
072	35U5380	CHAMBER SUPPORT	01/11/1995-
073	35U6440	GUARD SUPPORT	01/11/1995-
074	35D3590	EXHAUST FLUE CHAMBER	01/11/1995-
075	35D3600	FLAME DEFLECTOR	01/11/1995-
076	33A0980	SCREW 3/16W. X18TE	01/11/1995-
077	33A0950	REAR BRACKET	01/11/1995-
078	33A2900	PILOT BURNER BODY	01/11/1995-
079	33A0970	RING NUT	01/11/1995-
080	33A1081	THREE-FLAME BURNER	24/04/2008-
081	33A1000	FRONT BRACKET	01/11/1995-
082	35T9650	FLAT BRACKET	01/11/1995-
083	35D3560	HALF FLUE FRONT PLATE	01/11/1995-