

Зип Общепит


vsezip.ru

+7(812)987-08-81




135A

Edition 20030709-

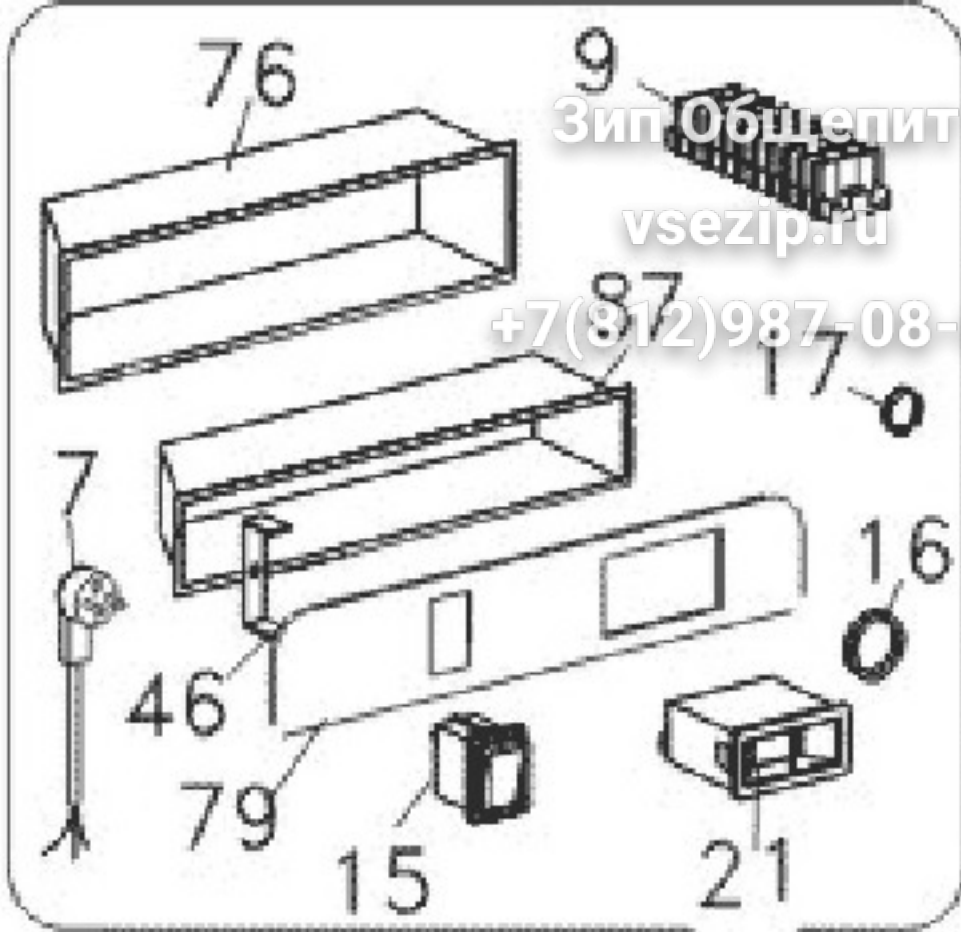

Зип Общежит
vsezip.ru

+7(812)987-08-81

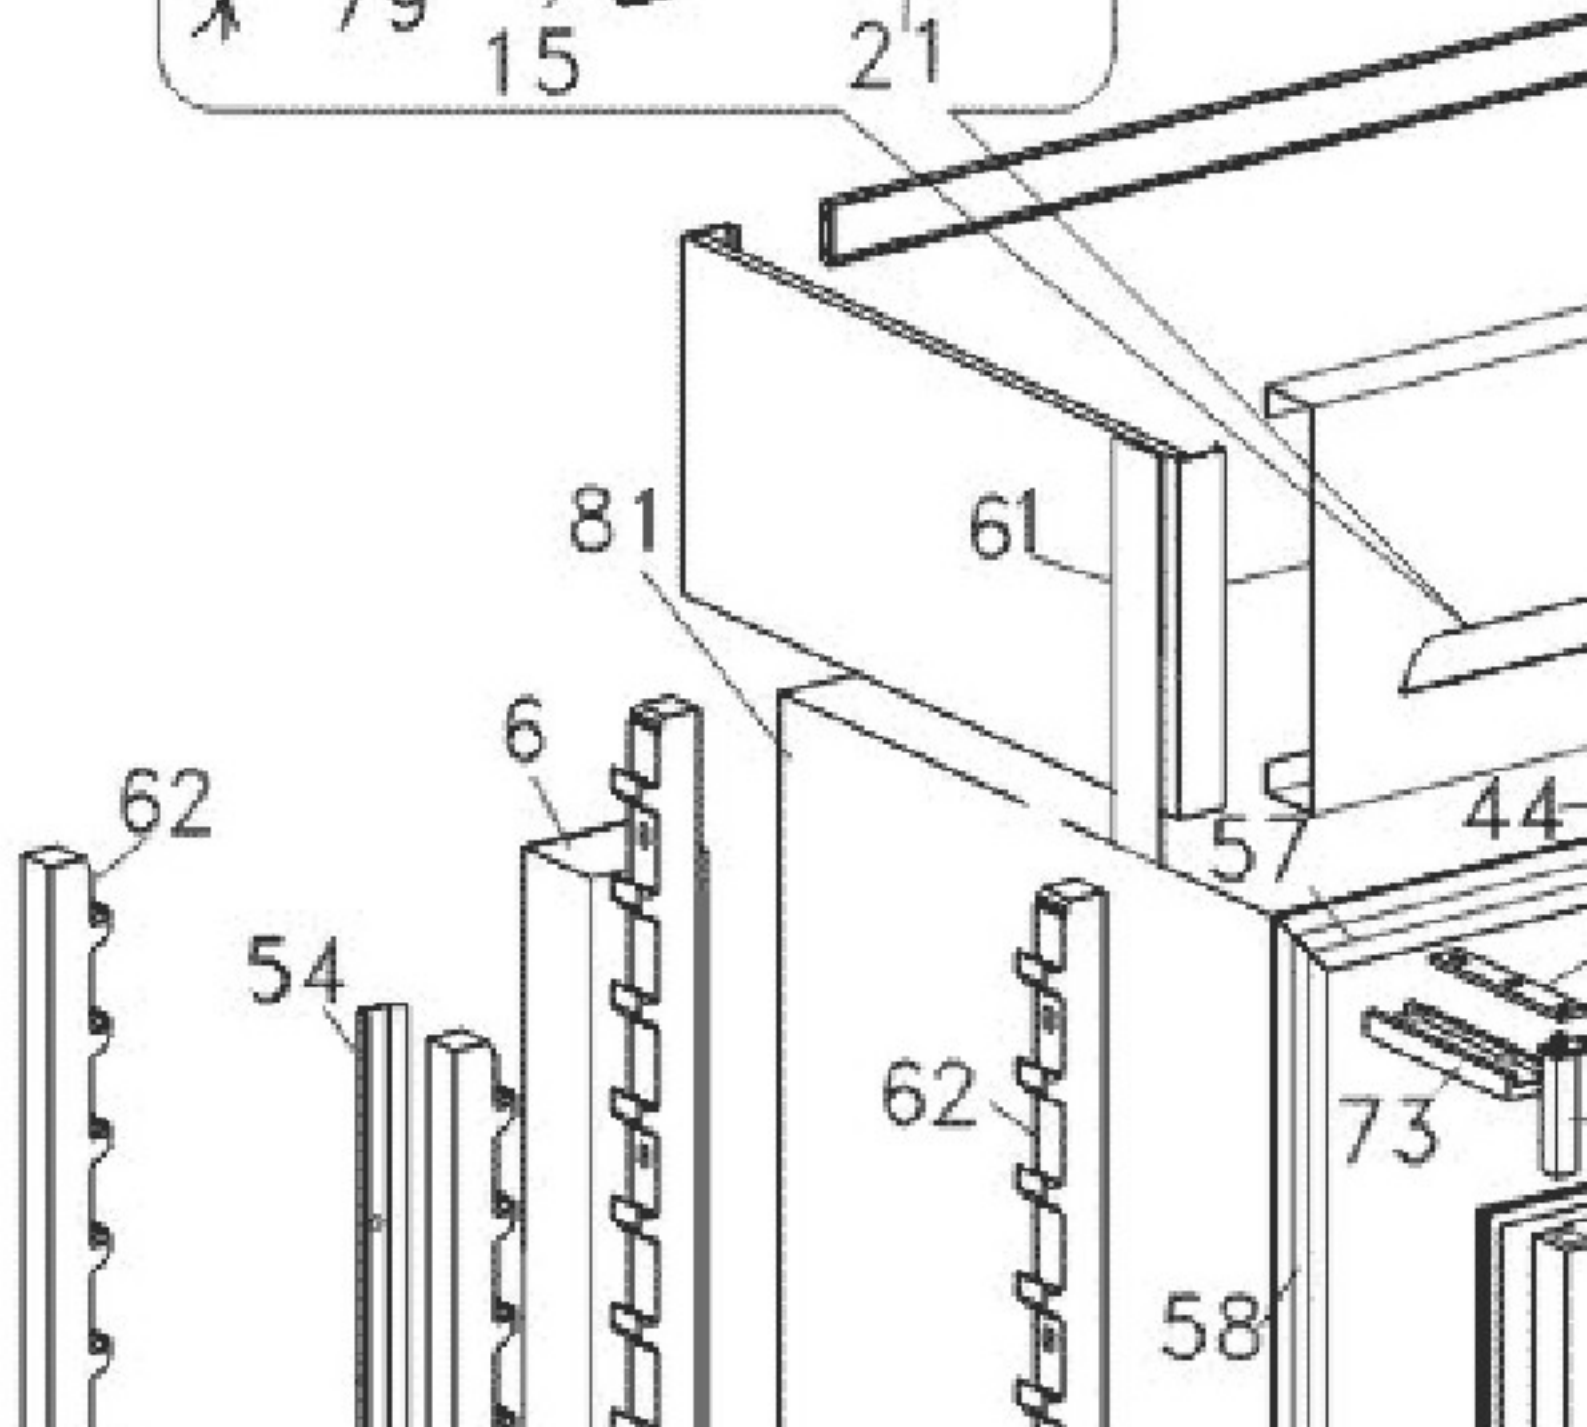

Pos	Code	Description	Info
001	3178300	PLUG	05/05/1998-
002	30F0150	FRIDGE DOOR	05/05/1998-
004	30T5810	BOTTOM BRACKET	05/05/1998-
005	30T5990	CENTRAL RISE	05/05/1998-
006	35C9150	BACK RISER	05/05/1998-
007	32A2200	POWER SUPPLY CABLE	05/05/1998-
008	32D0020	CABLE CLAMP Ø 4 - 12	05/05/1998-
009	32D0750	TERMINAL BOARD	05/05/1998-
010	32M1080	FAN	05/05/1998-
011	32M2510	FAN	05/05/1998-
012	32M4041	MOTOR	05/05/1998-
013	32M6870	FAN MOTOR	07/12/2001-
014	32W1320	MICROSWITCH	05/05/1998-
015	32W2331	BIPOLAR SWITCH	05/05/1998-
016	32X0120	GROMMET Ø 21	05/05/1998-
017	32X0140	GROMMET Ø13,5-Ø25	05/05/1998-
021	32V2930	DIGITAL THERMOREGULATOR	17/04/1999-
022	32V1260	RELAY	05/05/1998-
023	32V1410	ENGINE CUTOU	05/05/1998-
024	32V1490	CONDENSER	05/05/1998-
025	3300030	CONDENS. DRAIN	05/05/1998-
026	33A0180	FILTER	05/05/1998-
027	33A1200	AUXIL.VALVE	05/05/1998-
028	34D6170	CONDEN.+BAFF	05/05/1998-
029	34D6520	COMPRESSOR	05/05/1998-
030	34D5710	EVAPORATOR	05/05/1998-
031	34D6730	MOTOR ASS.Y	02/04/1999-
032	35H0610	CONTROL BOAR	17/04/1999-
033	35P0730	RIGHT EVAP. GUARD	05/05/1998-
034	35P0740	LEFT EVAP. GUARD	05/05/1998-
035	35C9100	CENTRAL EVAP. GUARD	05/05/1998-
036	35G6520	COVER	05/05/1998-
037	35G6560	MOTOR ROOM HEAD	05/05/1998-
038	35Q7350	MICROSWITCH GUARD	05/05/1998-
041	35S3050	TRAY SLIDE	05/05/1998-
043	35V0360	GUARD SUPPORT	05/05/1998-
044	35V0880	STIFFENING	05/05/1998-
045	35V0890	LOCK SUPPORT	05/05/1998-
046	35V1010	CONTROL BOARD C	17/04/1999-
048	35V2270	STIFFENING	05/05/1998-
049	35V2940	FAN SUPPORT	05/05/1998-
051	35W0462	TRAY ASS.Y	24/07/2000-
052	35X1640	DRAIN TRAP	05/05/1998-
053	36A0710	GRID	05/05/1998-
054	36C0810	TRIM	05/05/1998-
055	36C2031	FAN GUARD	05/05/1998-
056	36D1250	TRIM FRAME	05/05/1998-
057	36D1270	TRIM FRAME	05/05/1998-
058	36D1290	TRIM FRAME	05/05/1998-
059	36D7100	CONDENS. DRAIN	05/05/1998-
060	36D1750	RIGHT HEAD	05/05/1998-

Pos	Code	Description	Info
061	36D1800	LEFT HEAD	05/05/1998-
062	36D9470	RACK	05/05/1998-
063	36D9480	LOCK BRACKET	05/05/1998-
064	36D9490	TOP BRACKET	05/05/1998-
065	36C4590	ST-STEEL FO	21/03/2001-
066	36D9921	SPACER	05/05/1998-
070	36G6520	HINGE	05/05/1998-
071	36M0140	KEY LOCK	05/05/1998-
073	3600770	SPACER	05/05/1998-
074	36Q1400	PLUG	05/05/1998-
075	36Z0300	COND. TRAY	05/05/1998-
076	36Z6420	COMPONENT GUARD	05/05/1998-
078	36Z6441	PLASTIC-COATED TRAY 860X432X85	05/05/1998-
079	36Z6401	CONTROL BOARD	09/07/2003-
080	37Q2590	DOOR GASKET	05/05/1998-
081	40A1795	BODY	05/05/1998-
082	6007460	DOOR ASS.Y	05/05/1998-
083	32X0340	GROMMET	05/05/1998-
086	35X3900	DRAIN PIPE	05/05/1998-
087	36Z6410	COMPONENT GUARD	17/04/1999-