

Зип Общепит

vsezip.ru

+7(812)987-08-81




**71PD10**

**Edition 20110101-**

Зип Ощепит

vsezip.ru

+7(812)987-08-81

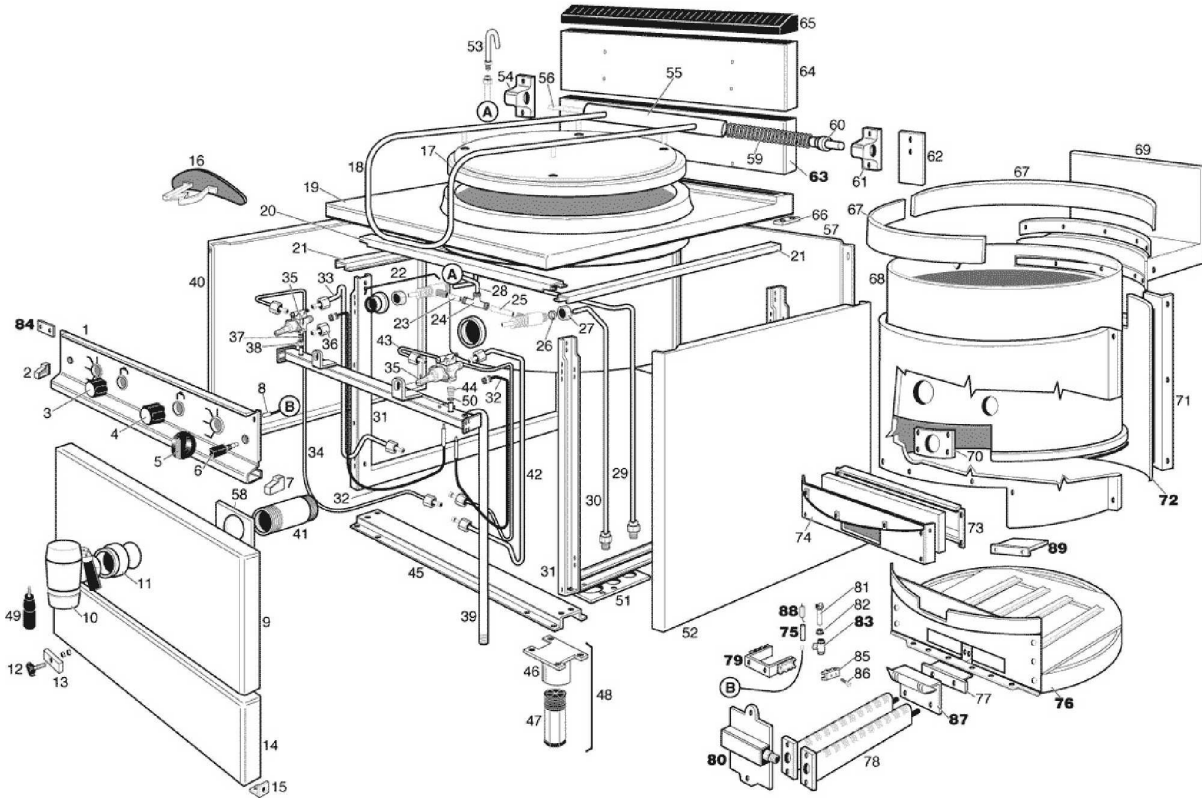

Pos	Code	Description	Info
001	35A8460	UPPER CONTROL BOARD	01/11/1995-
002	36D3430	LH END SIDE	01/11/1995-
003	36M2642	RED RING KNOB	01/01/2011-
004	36M2632	BLUE RING KNOB	01/01/2011-
005	36M2390	GAS CONTROL KNOB	01/11/1995-
006	32T0130	PIEZO IGNITION	01/11/1995-
007	36D3420	RH END SIDE	01/11/1995-
008	32A0061	CABLE "HF" 1100MM	01/11/1995-
009	35A9150	UPPER FRONT PANEL	01/11/1995-
010	33D2291	"DRAIN COCK 2""	01/10/2008-
011	37M0580	COVER RING Ø 112	01/11/1995-
012	36M1870	HANDLE	01/11/1995-
013	35T9780	FLAT BRACKET	01/11/1995-
014	35A9140	LOWER FRONT PANEL	01/11/1995-
015	35U3770	"L" BRACKET	01/11/1995-
016	30Q0450	FILTER	01/11/1995-
017	35G2010	PAN LID	01/11/1995-
018	36M5190	HANDLE	01/11/1995-
019	30W1540	PAN 100 LT. ASS. Y	01/11/1995-
020	35U3791	UPPER CROSS MEMBER	01/11/1995-
021	35U3780	UPPER SIDE MEMBER	01/11/1995-
022	33D0590	"COCK 3/8""	01/11/1995-
023	35Z5630	SPACER	01/11/1995-
024	33Q0140	"T" JOINT	01/11/1995-
025	35Z5620	PIPE Ø 10X1X55	01/11/1995-
026	36Q0080	BICONE Ø 10X6.5	01/11/1995-
027	36Q0140	BICONE NUT Ø 10	01/11/1995-
028	30Z1401	WATER PIPE ASS. Y	01/11/1995-
029	30Z1381	REAR PIPE ASS. Y	01/11/1995-
030	30Z1391	PIPE	01/11/1995-
031	30T1730	SIDE FRAME ASS. Y	01/11/1995-
032	33A0520	THERMOCOUPLE	01/11/1995-
033	35Z5560	LH BURNER GAS PIPE	01/11/1995-
034	35Z5580	LH BURNER GAS PIPE	01/11/1995-
035	33A1040	GAS CONTROL	01/11/1995-
036	32Z1460	VALVE MAGNET	01/11/1995-
037	36Q0030	BICONE Ø12X8	01/11/1995-
038	36Q0050	BICONE NUT Ø 12	01/11/1995-
039	30Z1370	GAS MANIFOLD ASS. Y	01/11/1995-
040	35A8120	LH PANEL	01/11/1995-
041	35Z5100	DRAIN PIPE	01/11/1995-
042	35Z5550	PIPE	01/11/1995-
043	35Z5570	PIPE	01/11/1995-
044	31A7380	SCREW TE M5X10	01/11/1995-
045	35U3300	""OMEGA"" BRACKET"	01/11/1995-
046	36D9360	FOOT HOUSING ASS. Y	01/11/1995-
047	36D9350	STAINLESS STEEL FOOT	01/11/1995-
048	36D9340	STAINLESS STEEL FOOT ASS.Y	01/11/1995-
049	36M1330	KNOB	01/11/1995-
050	3128460	WASHER	01/11/1995-
051	35U7321	"Z" BRACKET	01/11/1995-

Pos	Code	Description	Info
052	35A8110	RH PANEL	01/11/1995-
053	33Q2582	WATER SPOUT	01/11/1995-
054	36D2800	LH HINGE SUPPORT	01/11/1995-
055	36G6680	LID HINGE	01/11/1995-
056	36G2650	HINGE SHAFT	01/11/1995-
057	35A8130	REAR PANEL	01/11/1995-
058	35Q1000	FLAT BRACKET	01/11/1995-
059	36G2640	SPRING	01/11/1995-
060	36G2680	SPRING PIN	01/11/1995-
061	36D2790	RH HINGE SUPPORT	01/11/1995-
062	35U3760	STIFFENING	01/11/1995-
063	30T1821	STIFFENING	01/11/1995-
064	30D1110	EXT. FLUE 800MM ASS. Y	01/11/1995-
065	35A9090	FLUE GUARD	01/11/1995-
066	35U4380	STIFFENING	01/11/1995-
067	37Q1960	INSULATING PANEL	01/11/1995-
068	35D0240	COMBUSTION CHAMBER	01/11/1995-
069	30D1101	FLUE ASS. Y	21/12/1995-
070	35G1530	FLAT BRACKET	01/11/1995-
071	35Q1170	INS. PANEL COVERING	01/11/1995-
072	37Q0180	INSULATING PANEL	01/11/1995-
073	35Q2900	INNER FLAME GUARD	01/11/1995-
074	35Q2910	OUTER FLAME GUARD	01/11/1995-
075	131AA46	HOSE 8'X40	01/11/1995-
076	30D4760	CHAMBER BOTTOM	01/11/1995-
077	35T8520	ASS. Y "L" BRACKET	01/11/1995-
078	34A0230	BURNER	01/11/1995-
079	35R0100	PILOT LIGHT SUPPORT	01/11/1995-
080	30Z1010	BURNER MANIFOLD ASS. Y	01/11/1995-
081	33A1081	THREE-FLAME BURNER	24/04/2008-
082	33A0970	RING NUT	01/11/1995-
083	33A2900	PILOT BURNER BODY	01/11/1995-
084	35T9650	FLAT BRACKET	01/11/1995-
085	33A0950	REAR BRACKET	01/11/1995-
086	33A0980	SCREW 3/16W. X18TE	01/11/1995-
087	35V9990	FLAME SUPPORT ASS. Y	01/11/1995-
088	32T0010	IGNITION PLUG	27/01/2010-
089	35W0620	SMOKES VISIBLE MIRROR	01/11/1995-