




Vue éclatée Structure / Exploded view - Structure / Explosionszeichnung - Rahmen

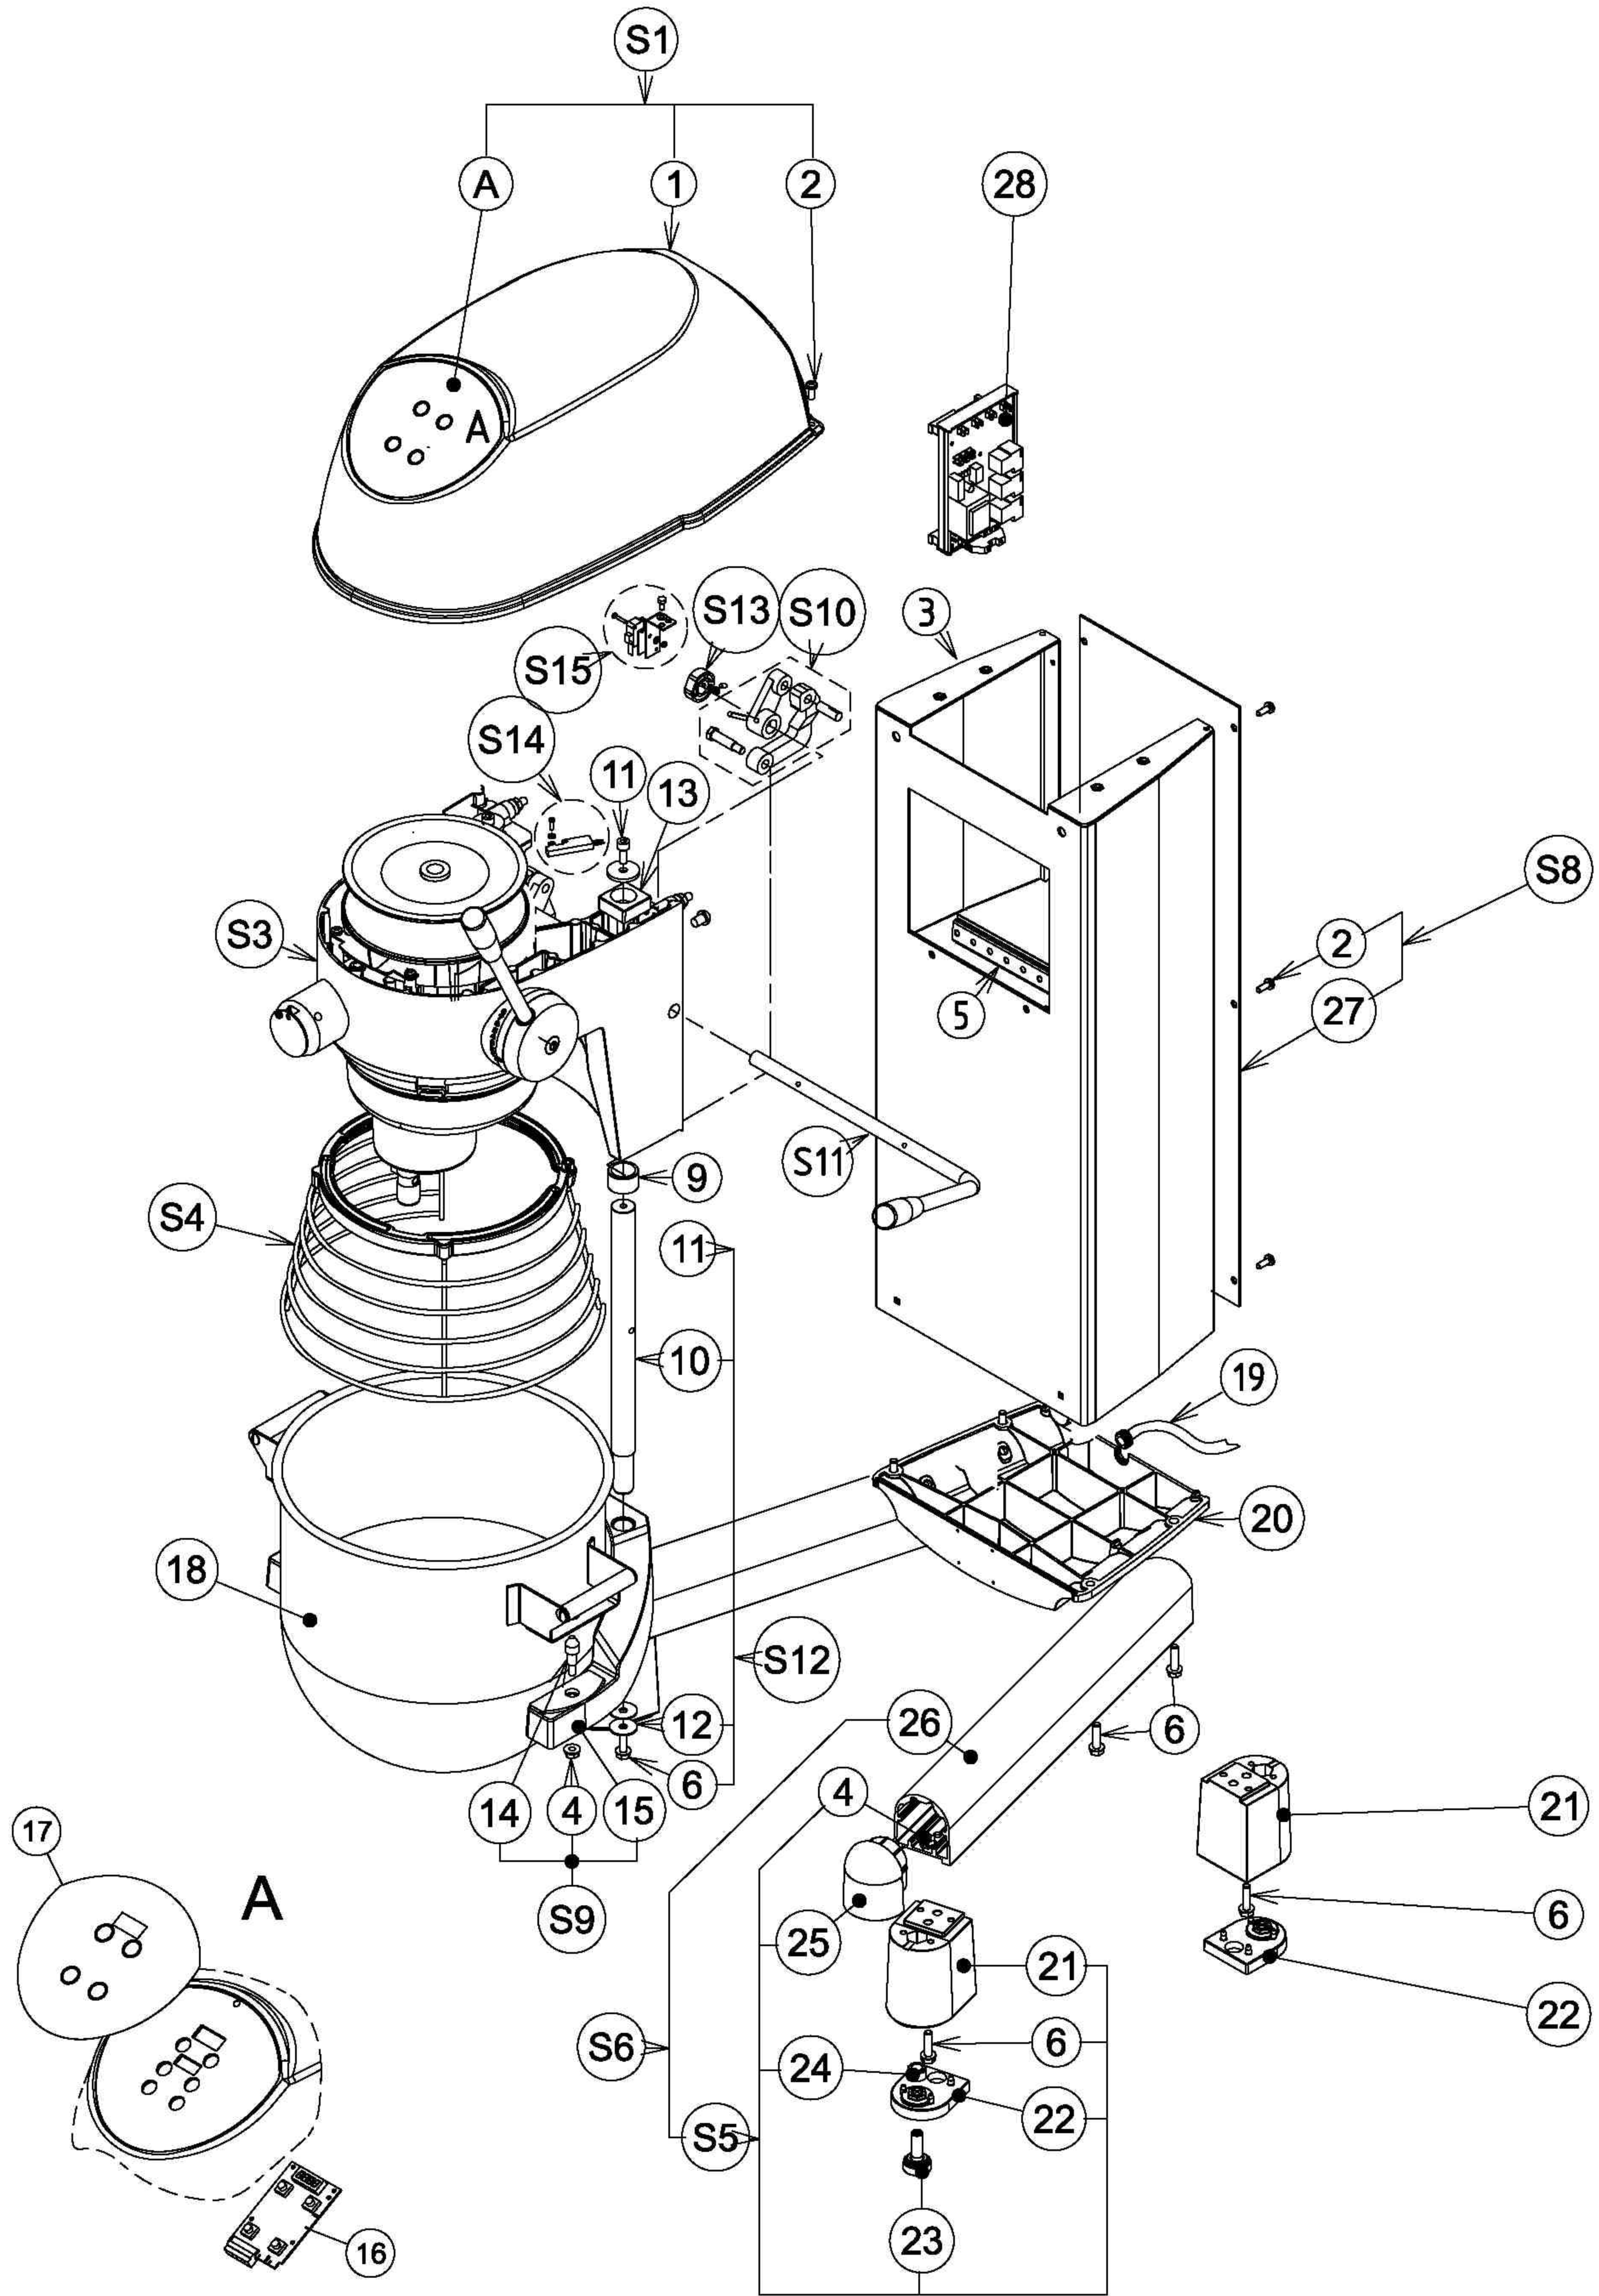


Vue éclatée variateur / Exploded view - Variator

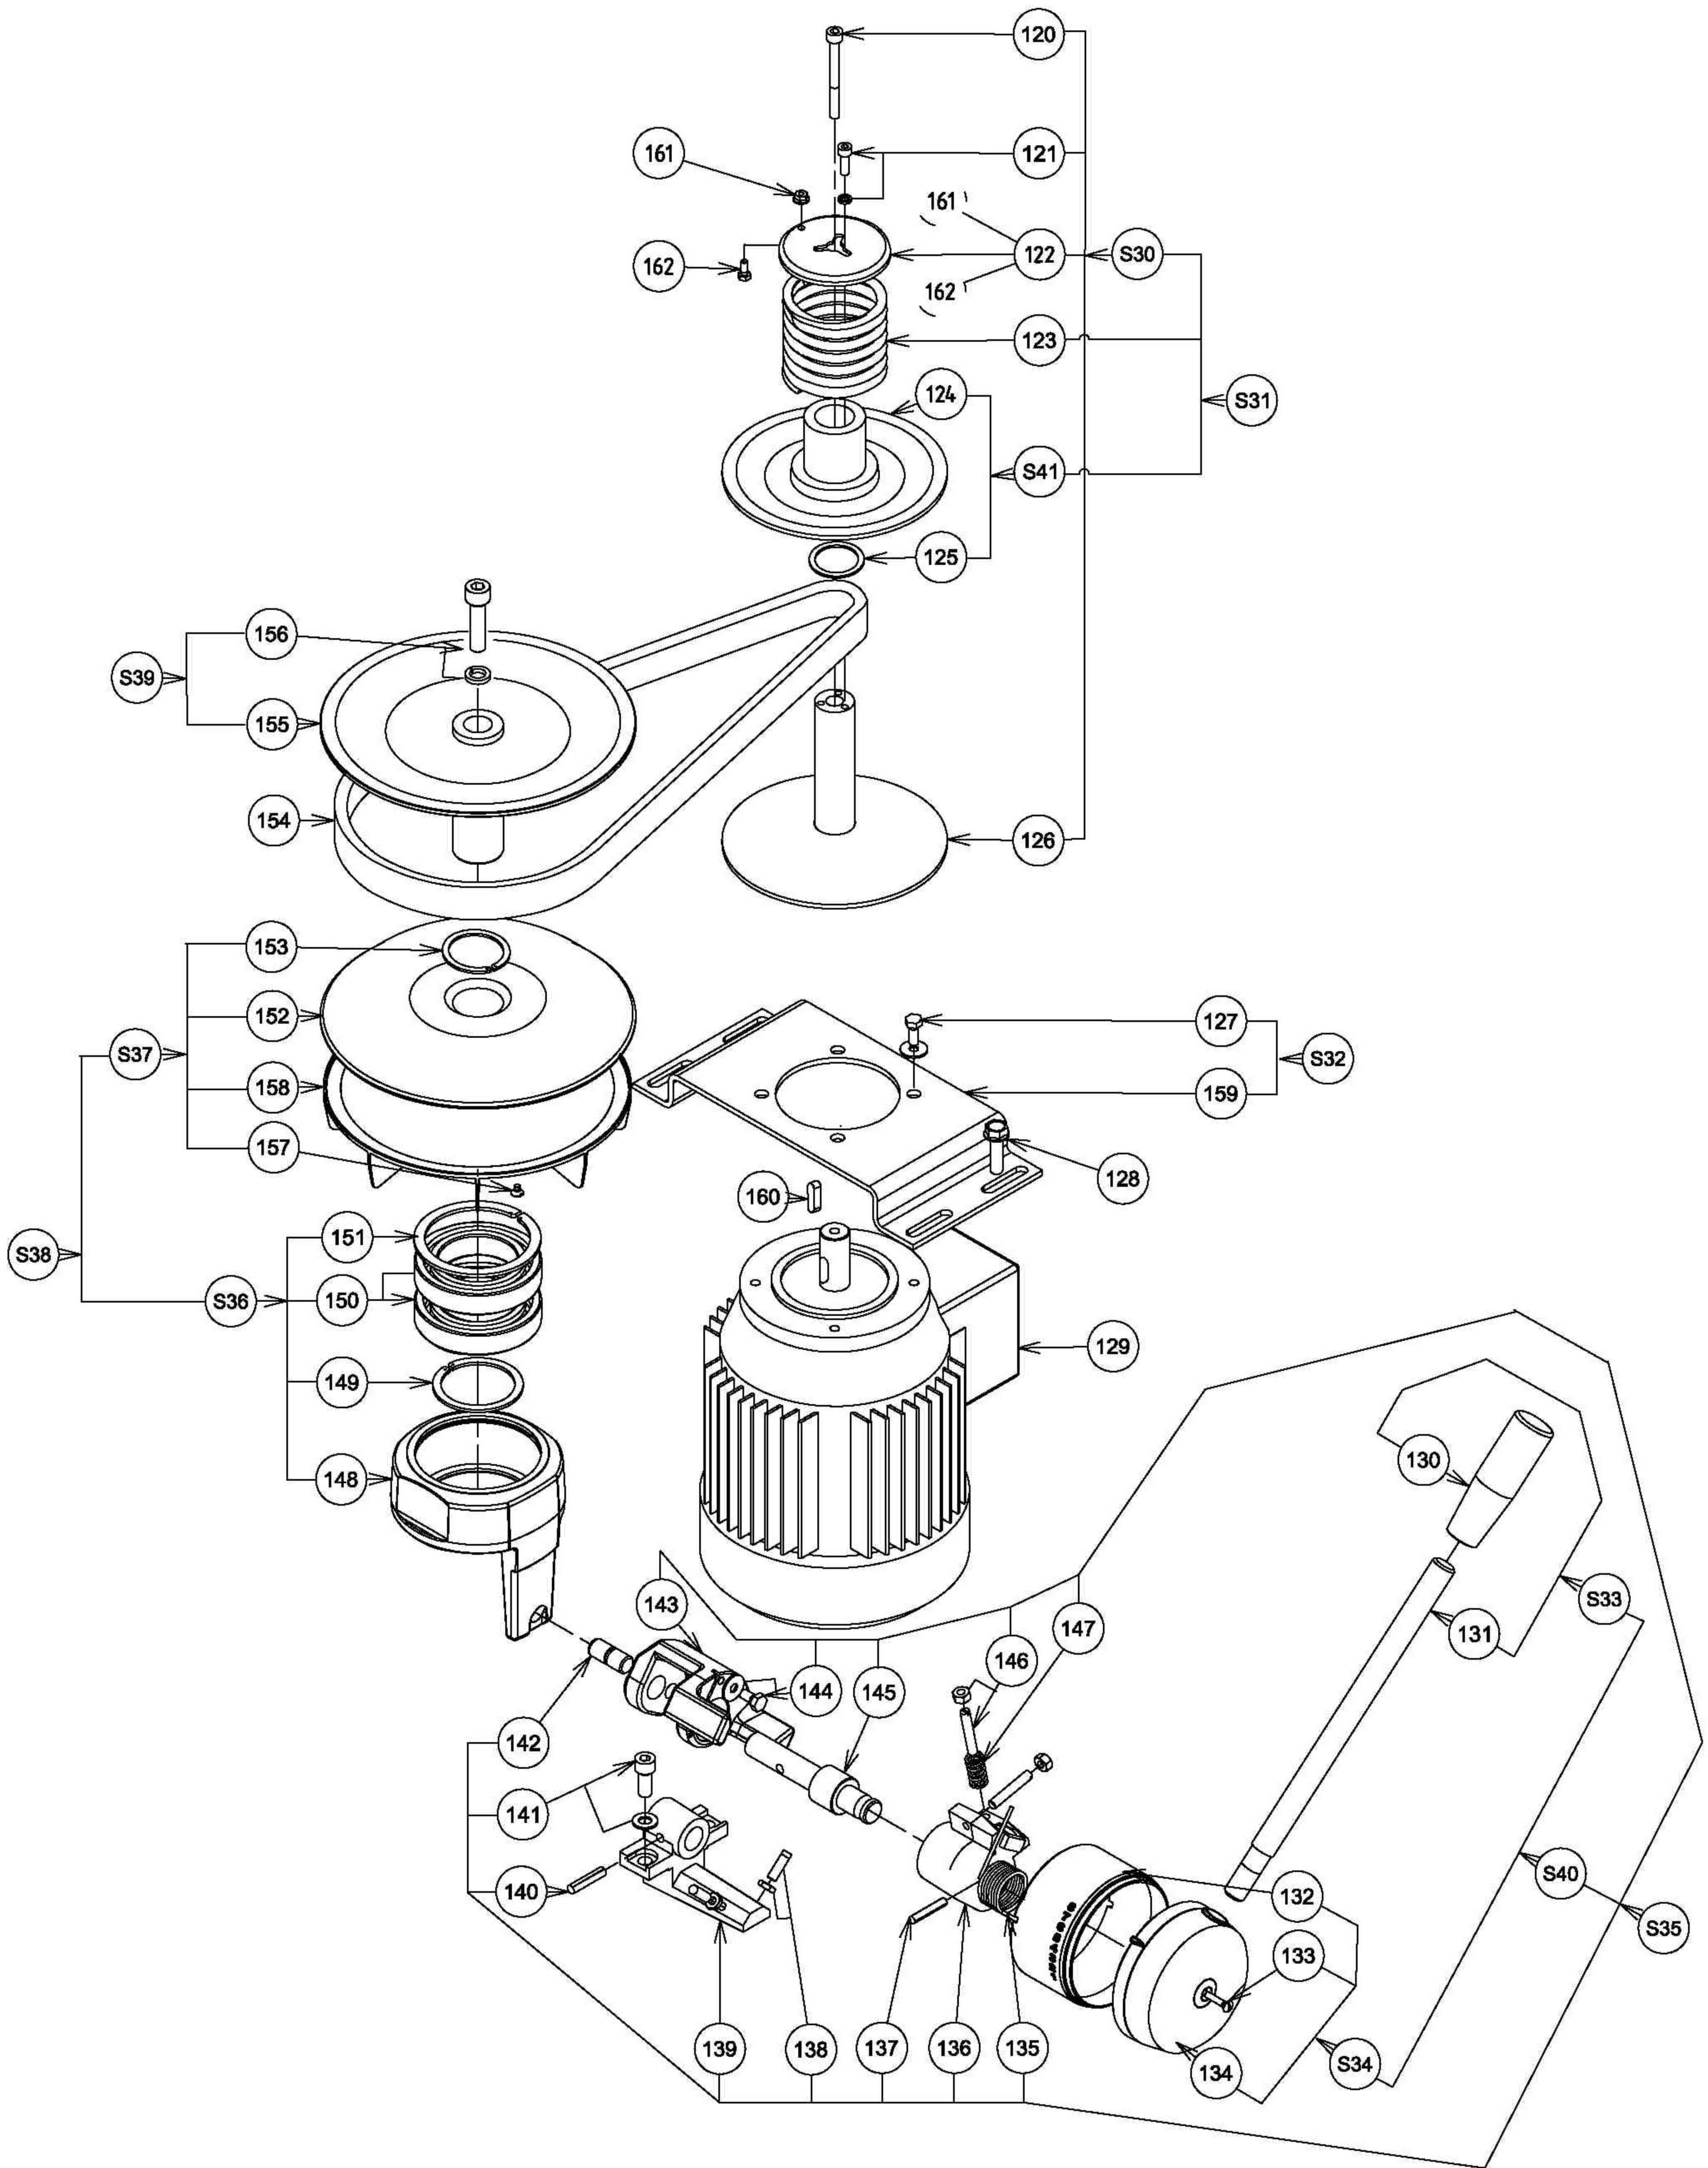

Vue éclatée mécanisme / Exploded view- Mechanism

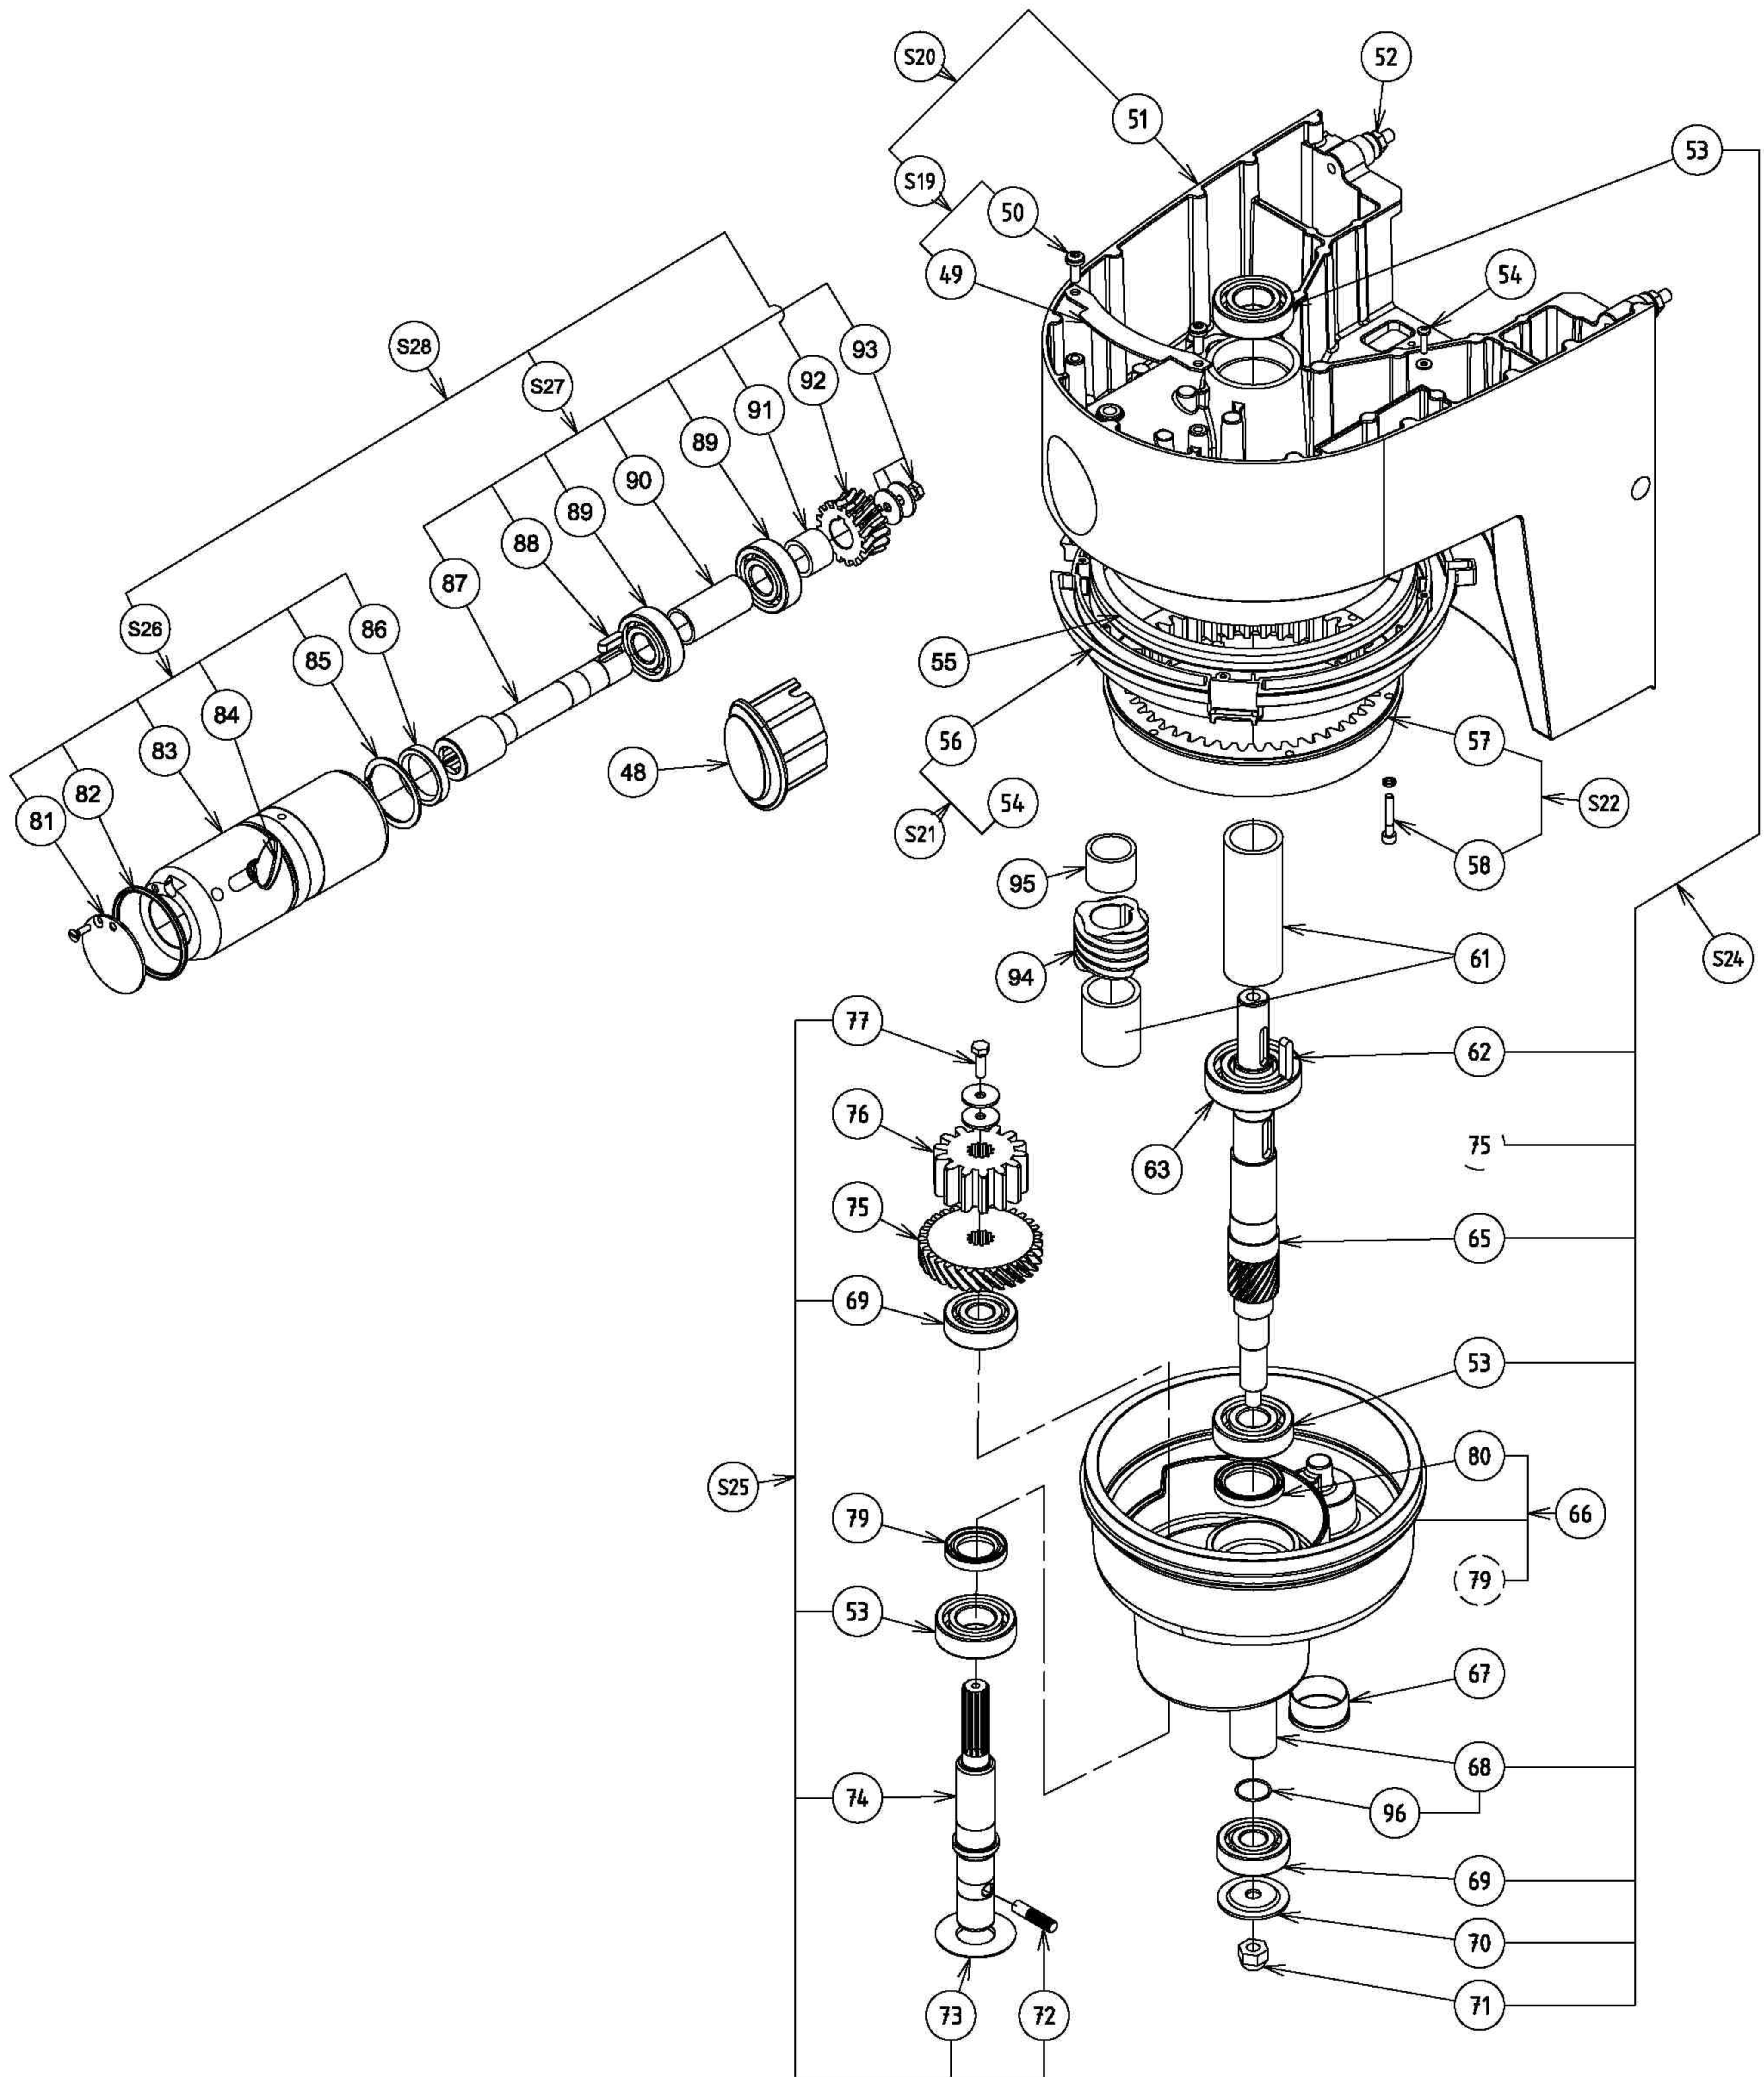


Vue éclatée Roulettes (optionnel) / Exploded view Castors (optional) / Explosionszeichnung Rollen (Sonderzubehör) / Esploso Rotelle (opzionale) / Despiece Ruedas (opcional) _

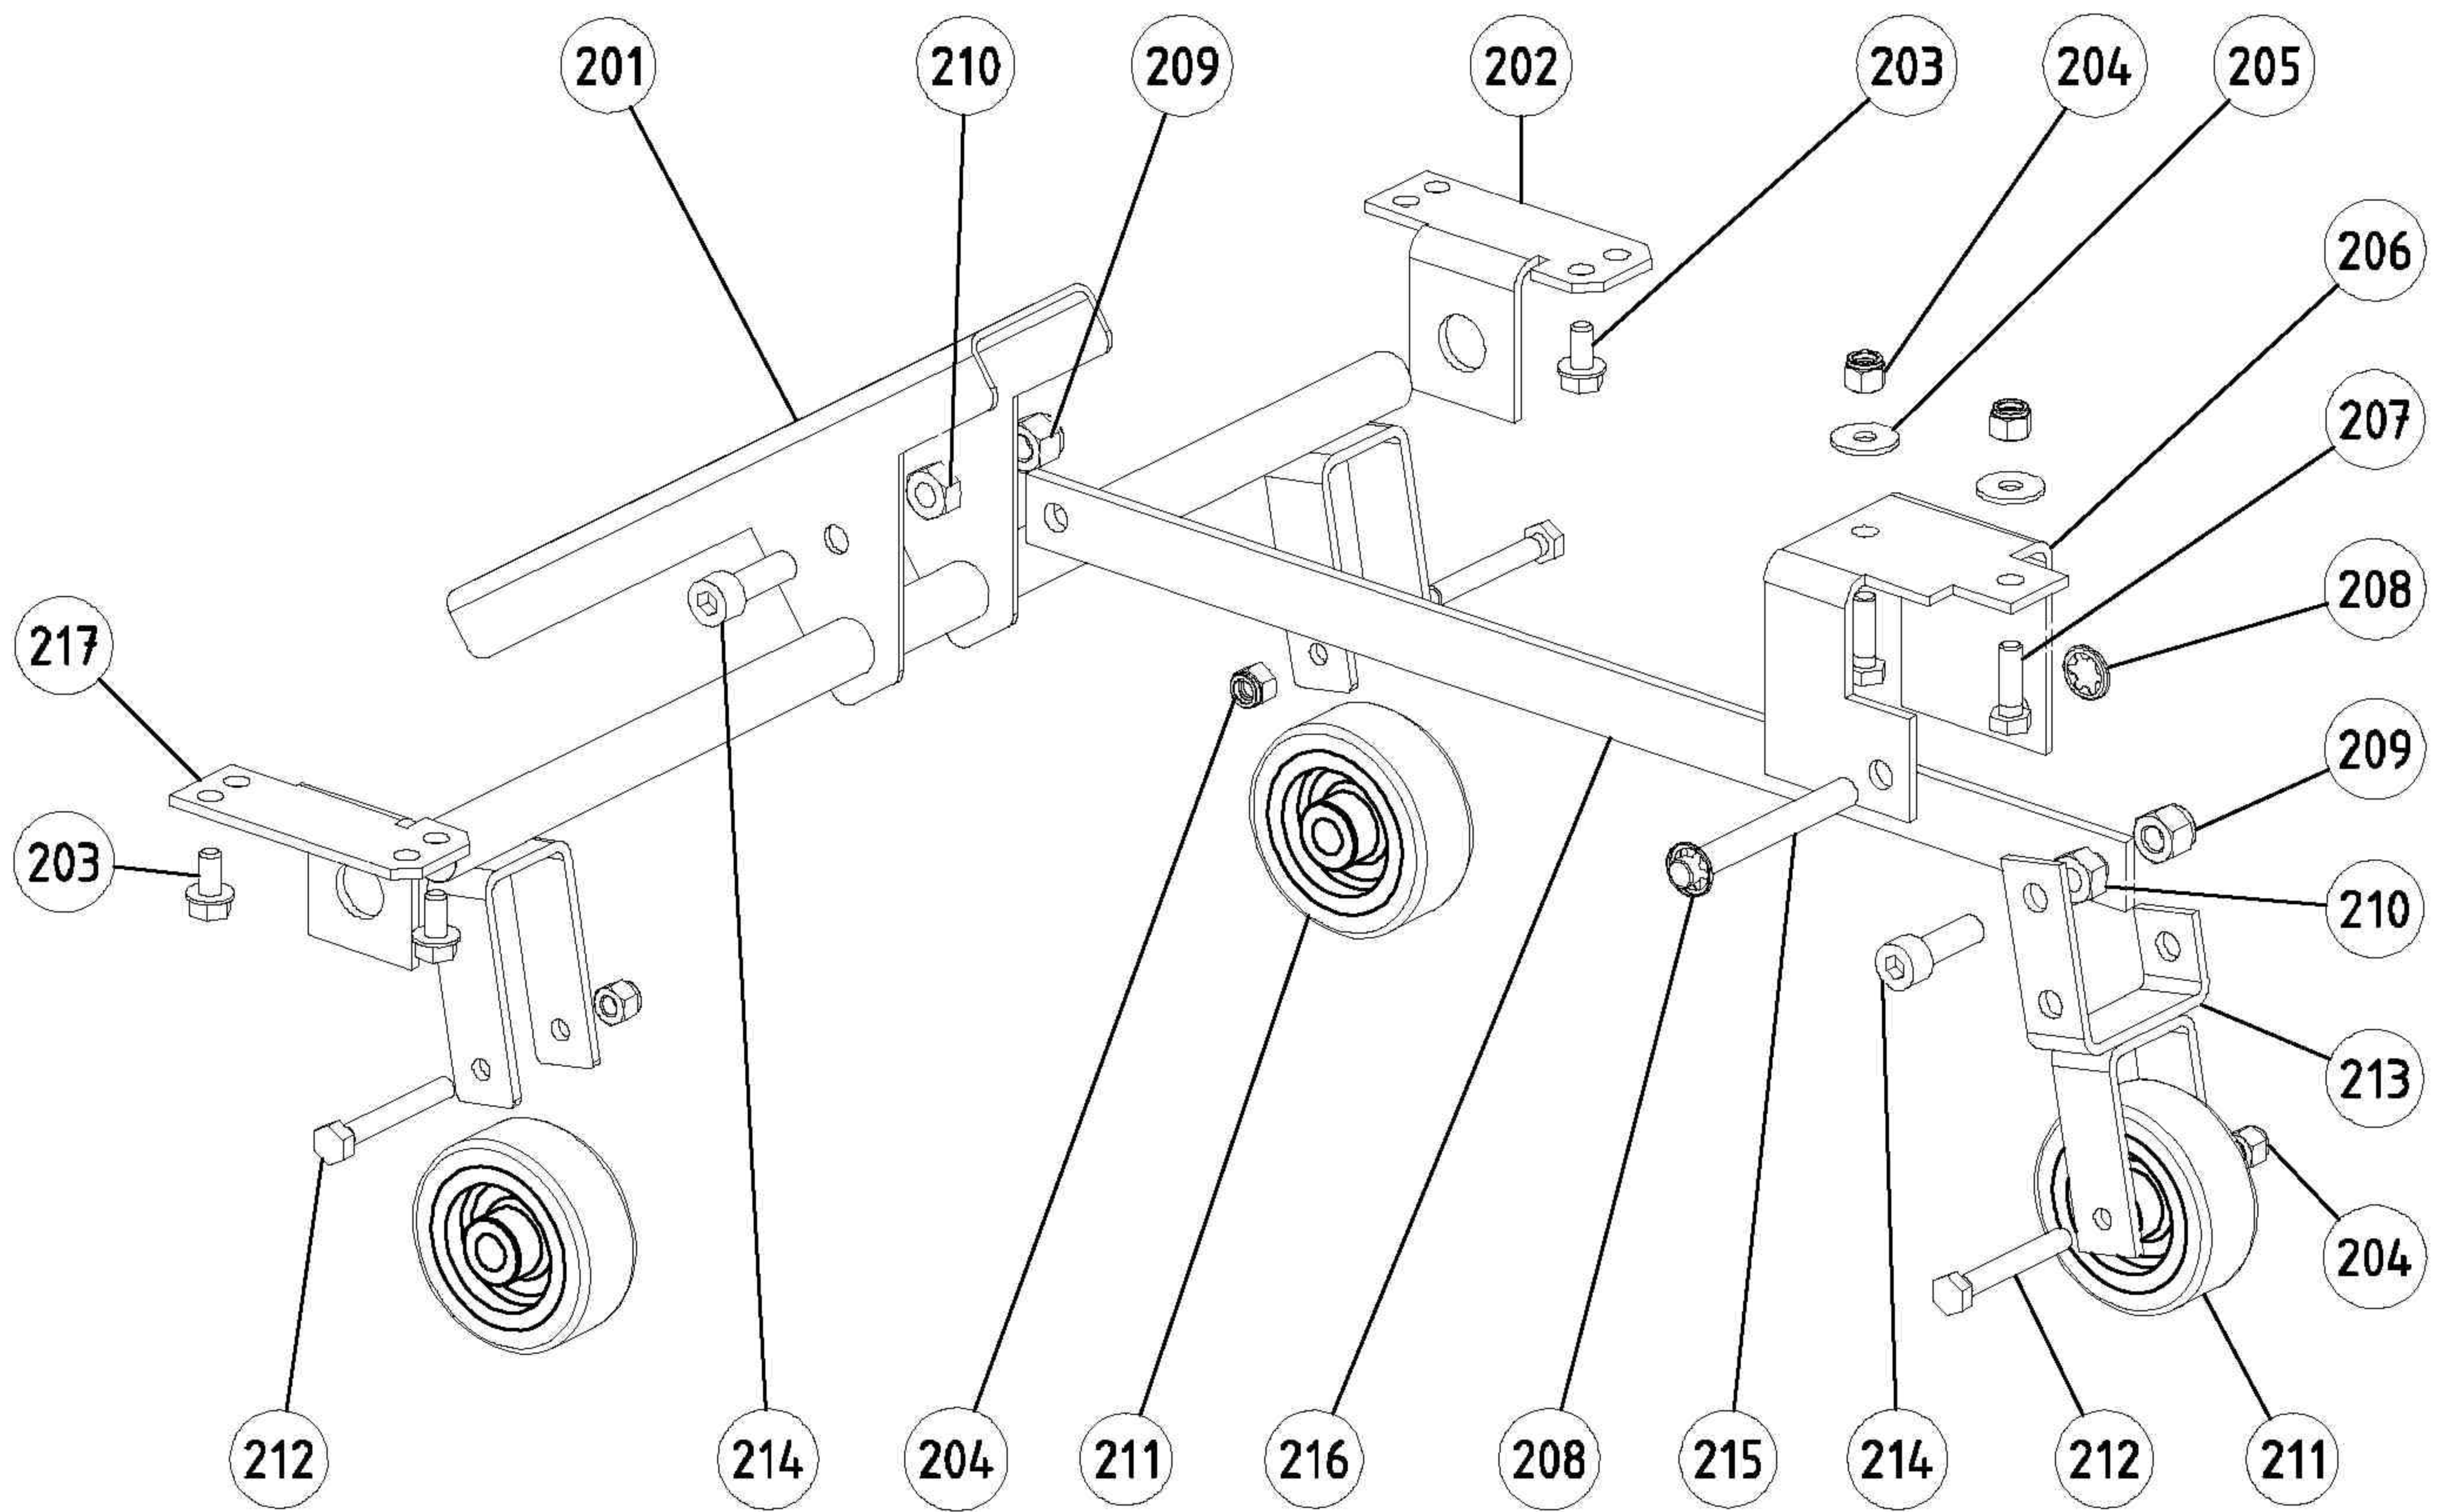

Служба Общепит

vsezip.ru

+7(812)987-08381

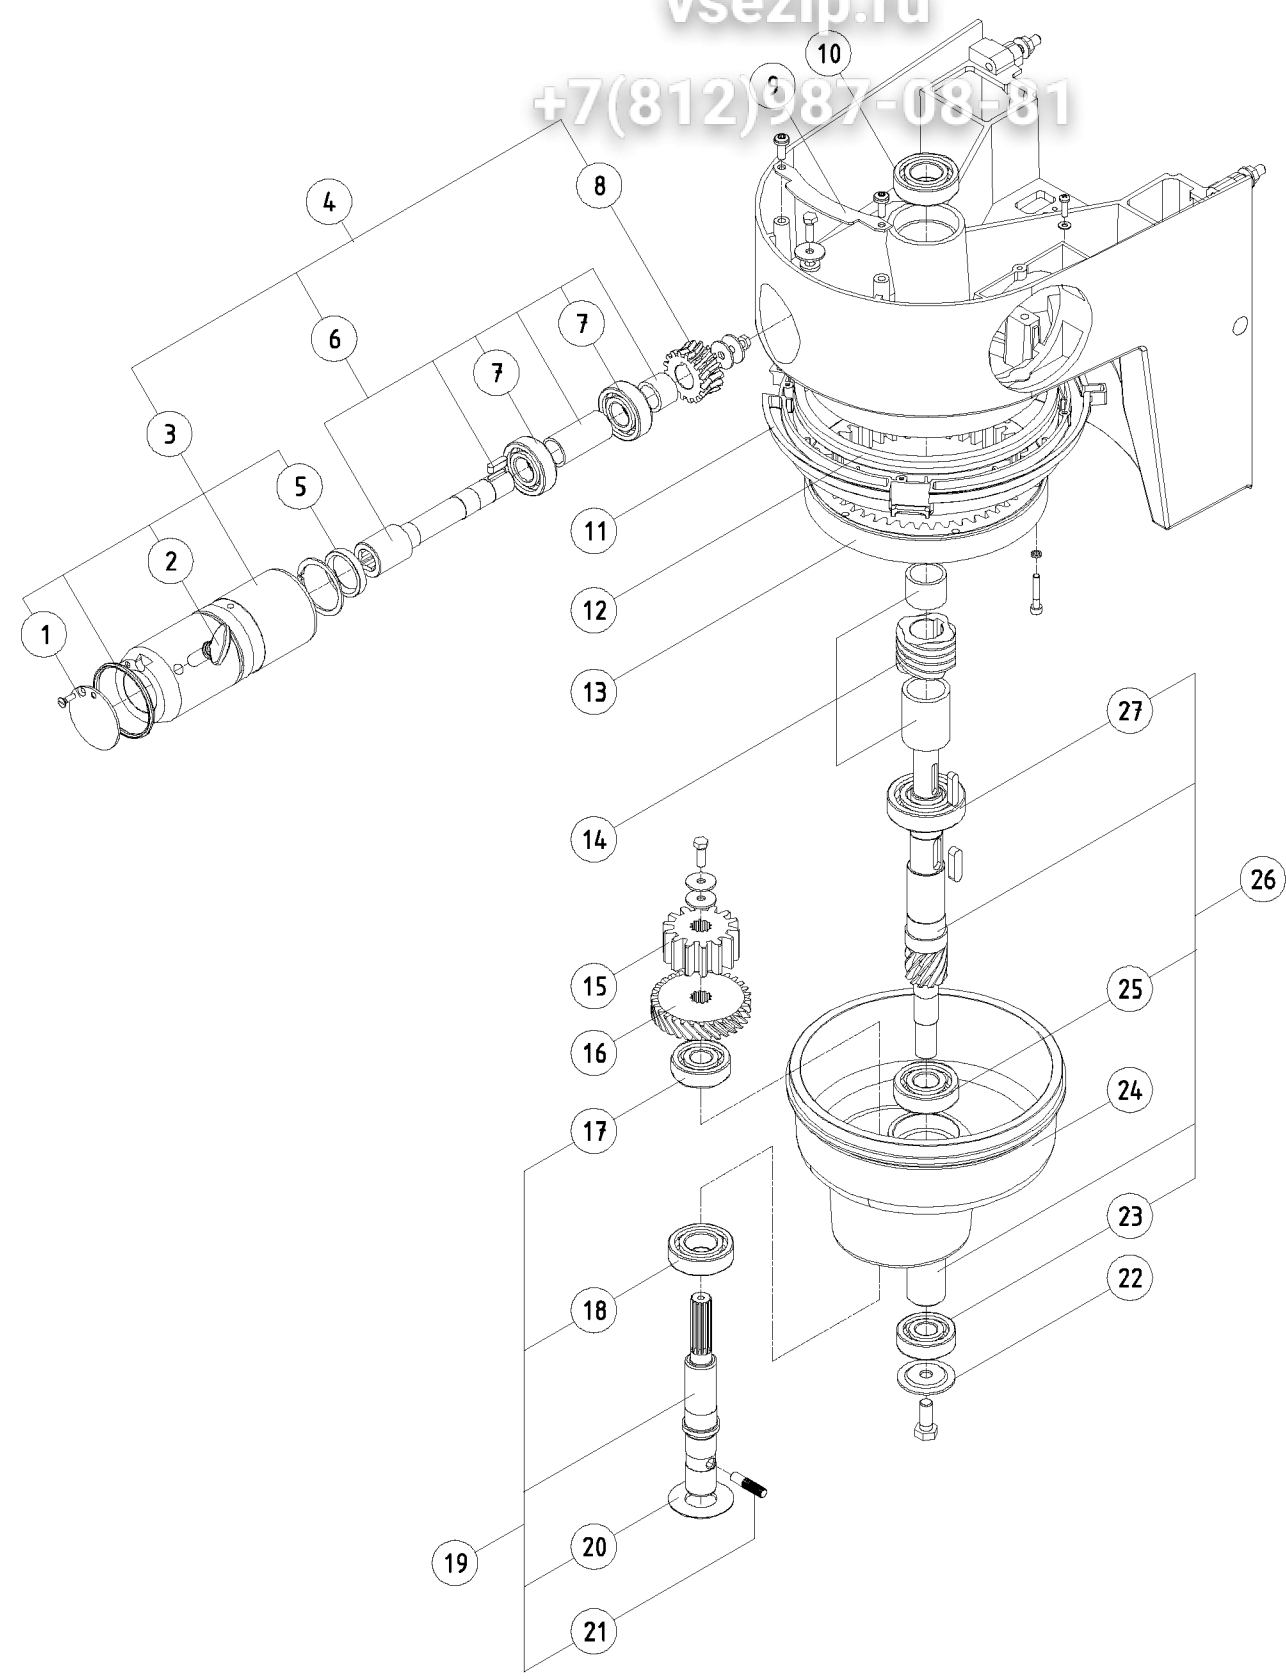


B

XBM50 FR04 02

Служба Обслуживания

sezip.ru

+7(812)987-08-81

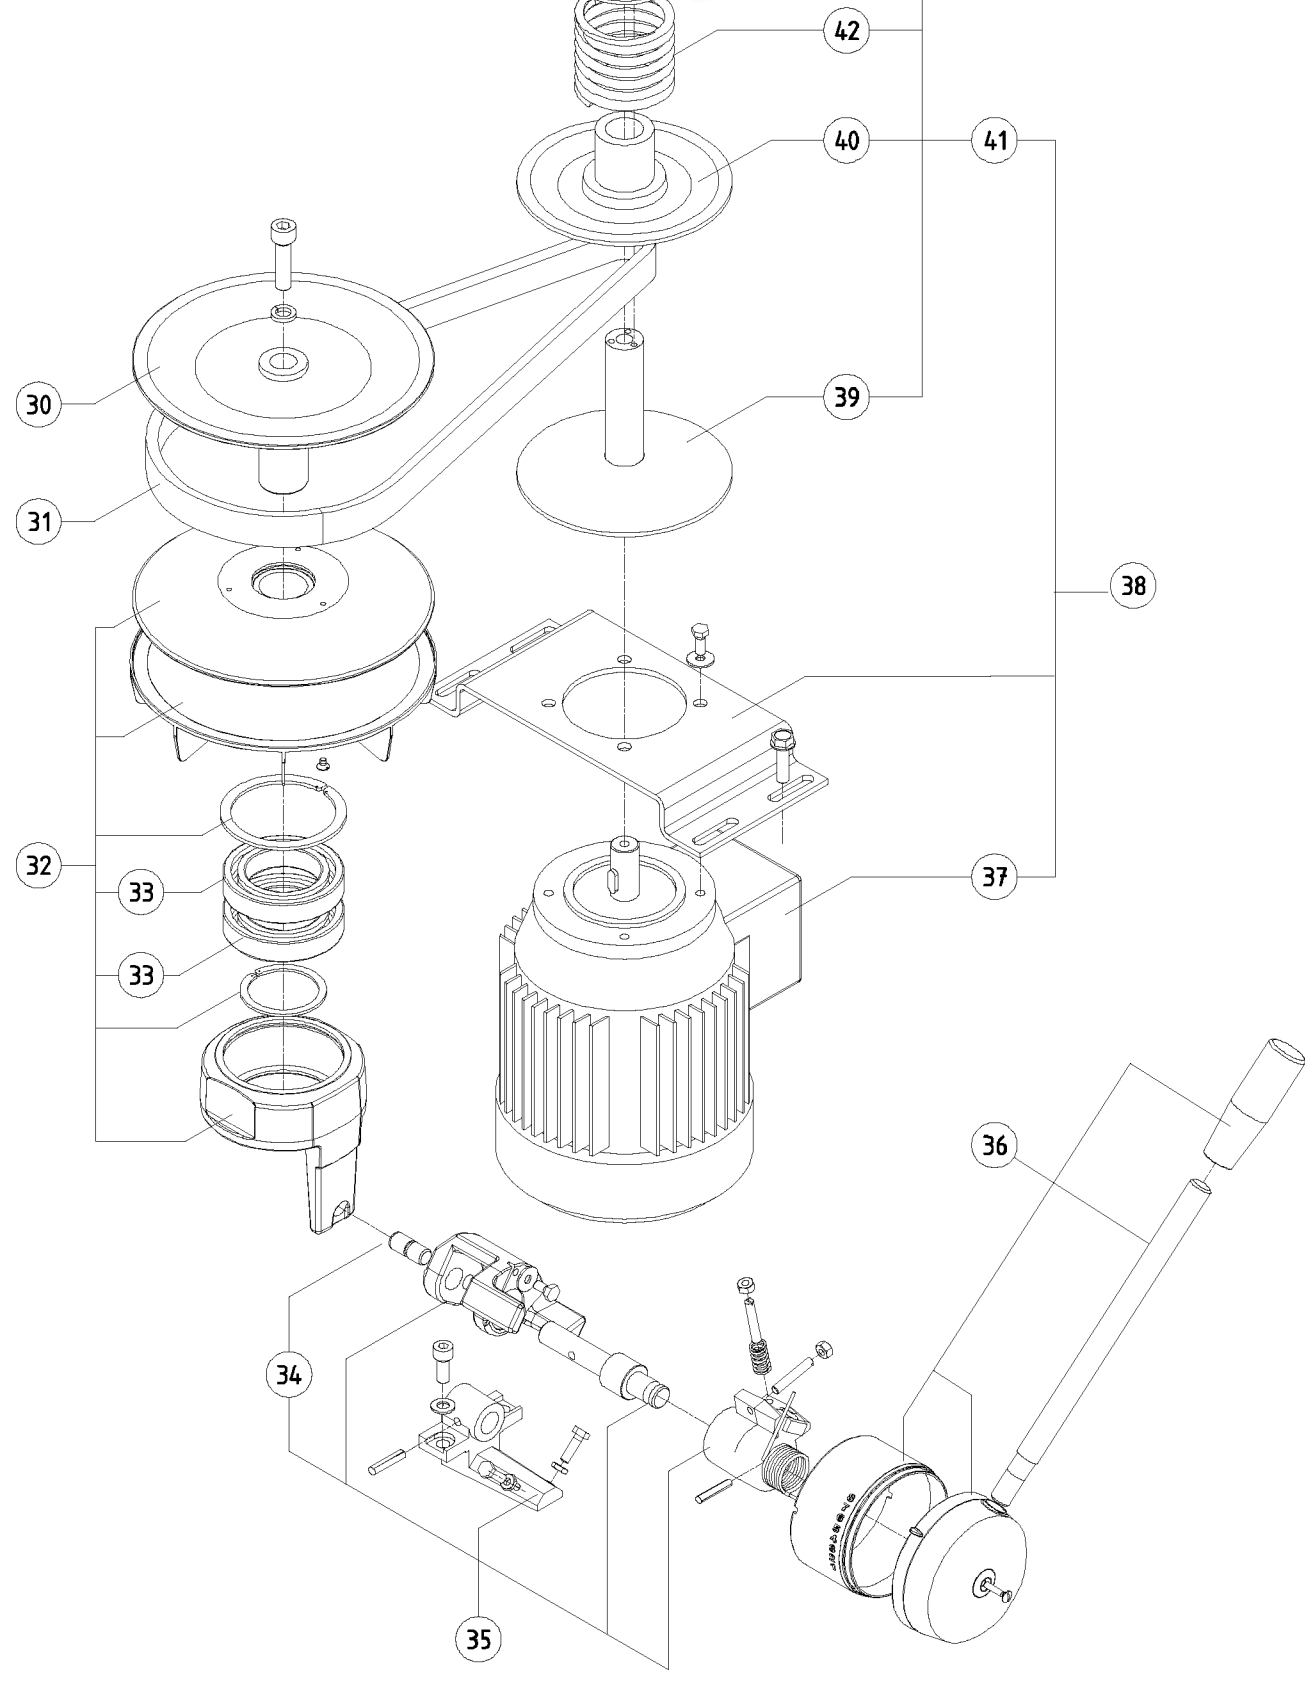

D

XBM50 FR 04 02

