


CU1526, CU2026, CU3030 Service Parts

Зип Общепит

CU1526 and CU2026 Cabinet

vsezip.ru

+7(812)987-08-81

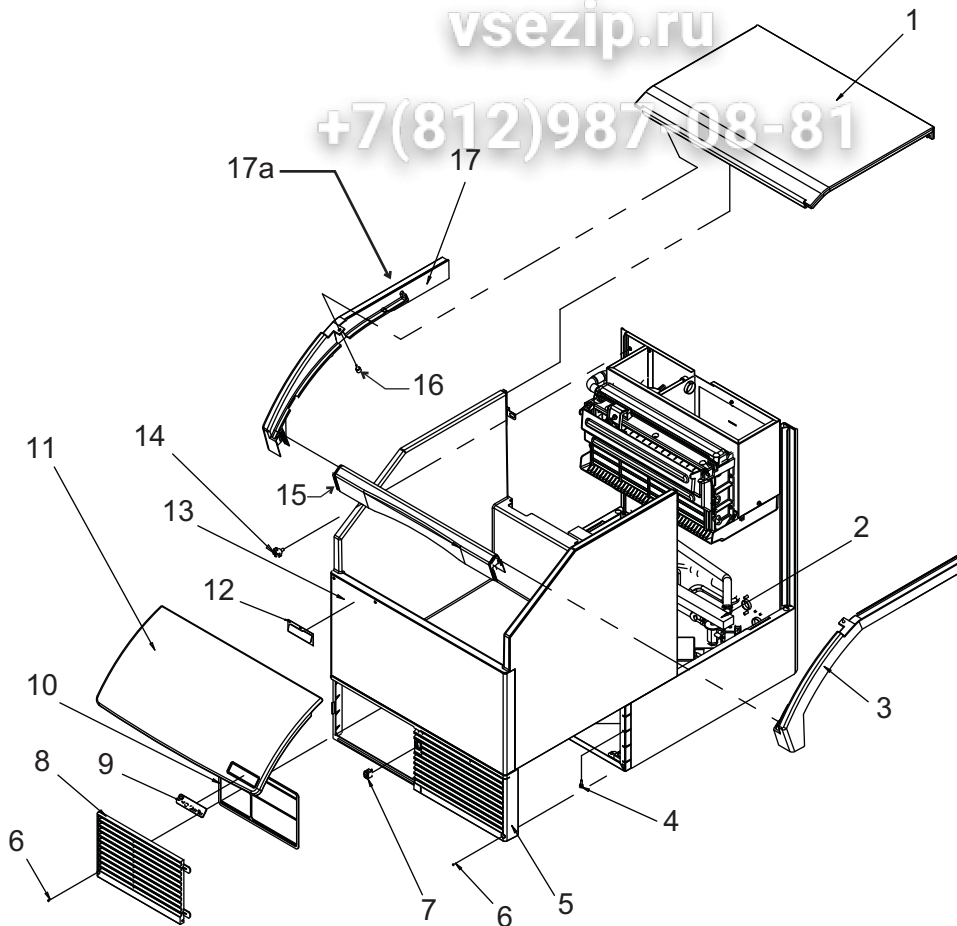

| Item Number | Part Number | Description |
|-------------|-------------|--|
| 1 | A39132-001 | Top panel |
| 2 | 19-0655-01 | Gasket |
| 3 | 02-4310-04 | Right rail, 26" model |
| 4 | 03-0727-10 | Thumb screw |
| 5 | 02-4304-01 | Right grill & frame, 26" model |
| 6 | 03-1404-12 | Screw |
| 7 | 12-2991-01 | On/Off switch |
| 8 | 02-4304-02 | Left grill, 26" model |
| 9 | 15-0825-01 | Emblem |
| 10 | 02-4308-01 | Air filter (AC only) |
| 11 | 02-4306-20 | Door, 26" model |
| 12 | 15-0824-01 | Prodigy logo |
| 13 | A39120-021 | Bin assembly, includes items 3, 12, 15, 17 |
| 14 | 03-1675-02 | 3 prong head screw |
| 15 | 02-4312-01 | Frame front, 26" model |
| 16 | 03-3892-01 | Screw, bin to top |
| 17 | 02-4310-03 | Left rail, 26" model |
| 17a | 03-1419-17 | Flat head screw for rail |

Not Shown

| | | |
|-----|------------|----------------------|
| NS1 | 02-3253-01 | Scoop |
| NS1 | KLP7 | Legs - set of 4 |
| NS3 | 16-1150-01 | Fitting, water 50 Hz |
| NS4 | 03-3901-01 | Washer, 50 Hz |

Note: Frame rail attachment to bin wall changed late 2008 from adhesive only to screws and adhesive. Screw used is #6 x 5/8 flat head. When replacing frame rail on prior bin, use 1/8" dia drill bit to create mounting holes in top of bin wall.


CU1526, CU2026, CU3030 Service Parts

Зип Общепит

CU1526 and CU2026 Back and Base

vsezip.ru

+7(812)987-08-81

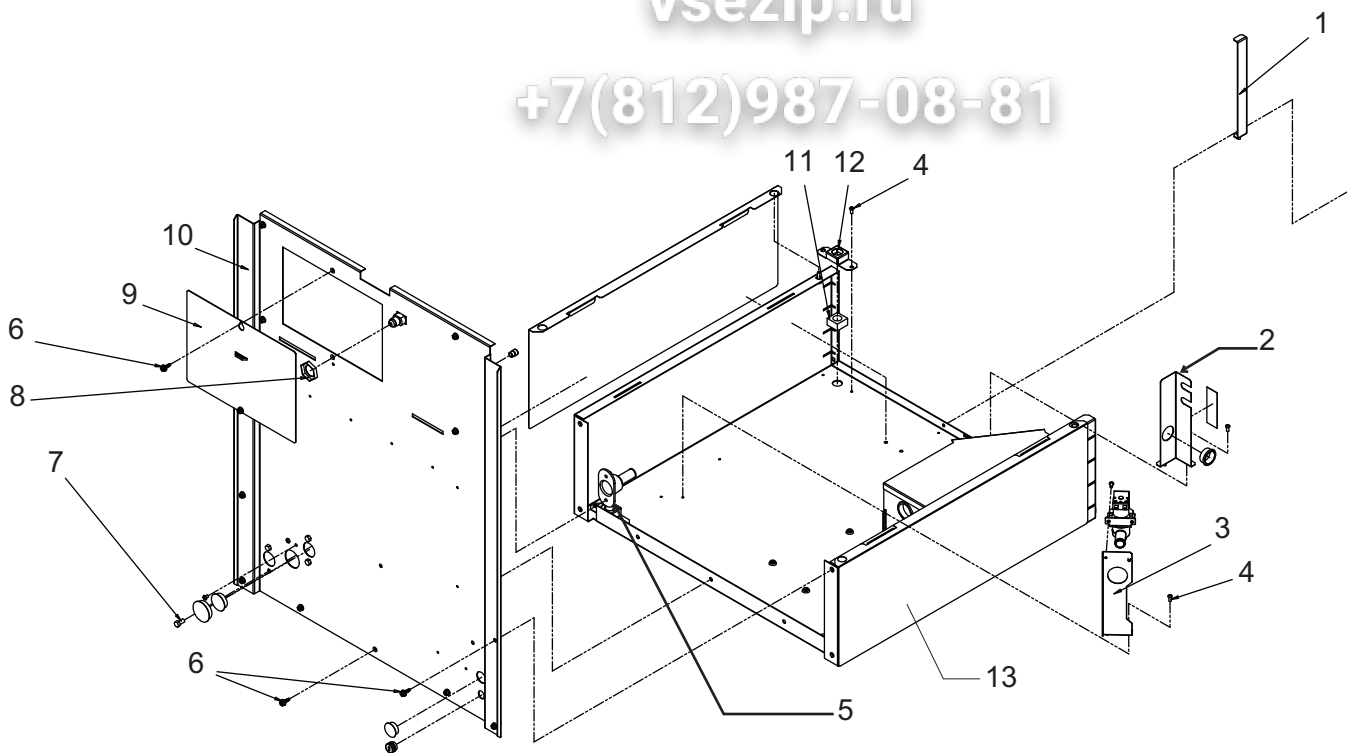


| Item Number | Part Number | Description |
|-------------|-------------|--|
| 1 | A39145-001 | Baffle, AC |
| 2 | A39086-001 | Bracket, access valves |
| 3 | A39092-001 | Bracket, purge valve |
| 4 | 03-1531-01 | Screw |
| 5 | 02-3692-21 | Drain fitting |
| 6 | 03-3868-01 | Screw |
| 7 | 03-0571-00 | Screw |
| 8 | 03-1394-01 | Pal nut |
| 9 | A39142-001 | Service panel |
| 10 | A39080-001 | Back panel |
| 11 | 03-1674-01 | Nut, leg mounting |
| 12 | A39083-001 | Bracket, nut |
| 13 | A39089-001 | Overlay panel, attach with adhesive tape, item 13a, 2 feet |
| 13a | 19-0642-02 | Adhesive tape, order by foot. |

CU1526, CU2026, CU3030 Service Parts

Зип Общепит

CU1526, CU2026 Pump, Float Valve, Water Sensor, Purge Valve

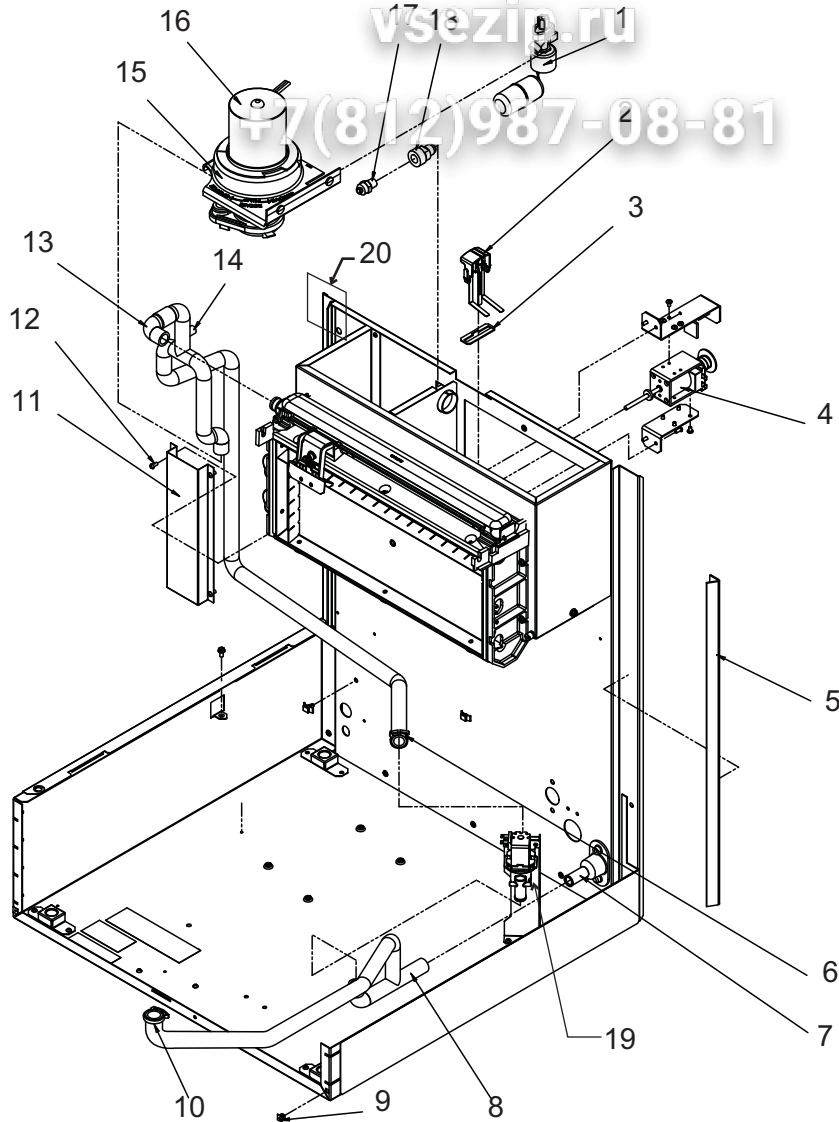


| Item Number | Part Number | Description |
|-------------|-------------|--|
| 1 | 02-3612-01 | Float valve |
| 1a | 13-0895-01 | Inlet tubing, order 2, cut to 15" |
| 2 | A39126-021 | Water level sensor |
| 3 | A39143-001 | Spacer |
| 4 | 12-3035-21 | Harvest assist solenoid, 115 v |
| | 12-3035-22 | Harvest assist solenoid, 230 v Includes mounting brackets |
| 5 | 02-4491-01 | Gasket, corner |
| 6 | 02-2814-09 | Hose clamp |
| 7 | 02-3692-21 | Drain fitting |
| 8 | A39144-001 | Drain hose, 26" model |
| 9 | 03-3804-01 | Screw receptacle |
| 10 | 02-2814-10 | Hose clamp |
| 11 | A39151-001 | Chase cover |
| 12 | 03-1531-01 | Screw |
| 13 | 02-4299-01 | Pump hose, 26" model |
| 14 | 11-0515-21 | Temp sensor set |
| 15 | 02-4318-01 | Pump bracket |
| 16 | 12-2919-21 | Water pump, 115 volt models |
| | 12-2919-22 | Water pump, 230 volt models |
| 17 | 16-1039-01 | Male connector |
| 18 | 16-0835-01 | Water inlet fitting, 3/8 flare |
| 19 | 11-0564-01 | Purge valve, 115 volt models |
| | 11-0564-02 | Purge valve, 230 volt models |
| 20 | 13-0954-01 | Foam pad, 2" x 2" |


CU1526, CU2026, CU3030 Service Parts
Зип ОбщеПИТ
CU1526 and CU2026 Air Cooled Refrigeration

vsezip.ru

+7(812)987-08-81

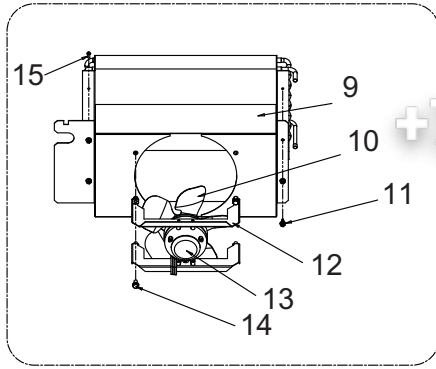

Condenser Fan

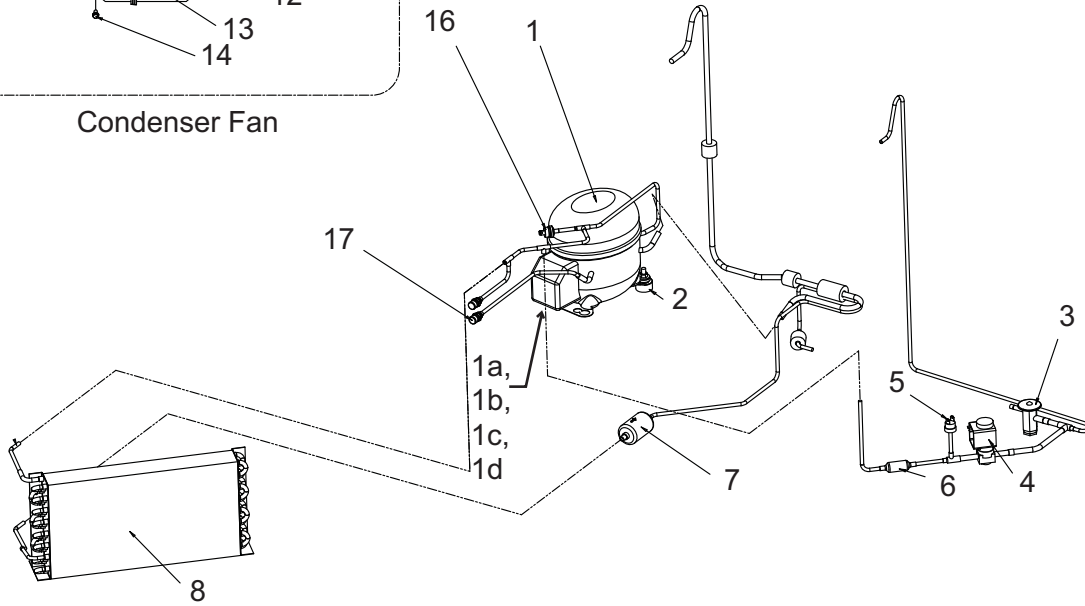


| Item Number | Part Number | Description | Part Number | Description |
|-------------|-------------|------------------------------|-------------|--|
| 1 | | Compressors* | 5 | 11-0566-21 Fan control pressure switch |
| | 18-8932-21 | CU1526 115/60 | 6 | 16-1063-02 Strainer |
| 1a | 18-8932-31 | Overload for above | 7 | 02-3319-01 Dryer |
| | 18-8932-26 | CU1526 230/50 | 8 | 18-8942-01 Condenser |
| 1b | 18-8932-32 | Overload for above | 9 | A39084-001 Shroud |
| | 18-8933-21 | CU2026 115/60 | 10 | 18-8773-01 Fan blade |
| 1c | 18-8933-31 | Overload for above | 11 | 03-3868-01 Screw |
| | 18-8933-22 | CU2026, 208-230/60 | 12 | A39113-001 Bracket, motor |
| | 18-8933-26 | CU2026, 208-230/50 | 13 | Fan motors |
| 1d | 18-8933-32 | Overload for above | | 12-2989-01 CU1526, 115/60 |
| 2 | | Compressor mounting hardware | | 12-2989-02 CU1526, 230/50 |
| | 03-1406-10 | Hex nut | | 12-1681-23 CU2026, 115/60 |
| | 03-3900-01 | Screw (up thru base) | | 12-1681-04 CU2026, 208-230/60-50 |
| | 18-0108-41 | Sleeve | 14 | 03-1645-01 Screw |
| | 18-4700-28 | Grommet | 15 | 03-1531-01 Screw |
| | 03-1407-07 | Washer | 16 | 11-0501-05 Hi pressure cut out |
| 3 | 16-1117-24 | CU1526 thermo exp valve | 17 | 16-1140-01 Port cap |
| | 16-1117-25 | CU2026 thermo exp valve | | 16-1139-01 Core |
| | 02-4406-01 | Insulation for TXV | | 16-1138-01 Seat |
| 4 | 11-0493-04 | Hot gas valve, 115/60 | | |
| | 12-2719-21 | Coil only, 115 volt | | |
| | 11-0493-05 | Hot gas valve, 230/60-50 | | |

* Compressors include overload, run capacitor, PTCR and dryer.

CU1526, CU2026, CU3030 Service Parts
Зип ОбщеПИТ
CU1526 and CU2026 Water Cooled Refrigeration

vsezip.ru

+7(812)987-08-81

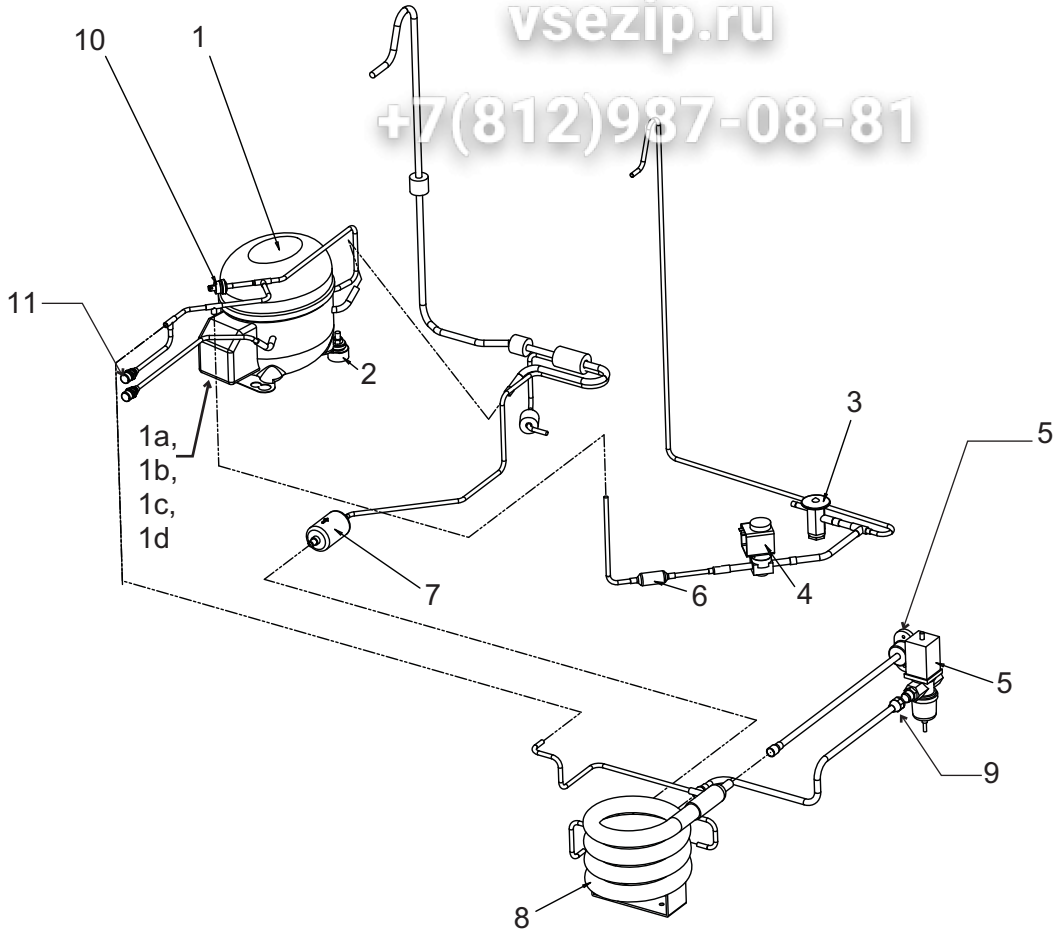

| Item Number | Part Number | Description |
|-------------|-------------|--------------------------------------|
| 1 | 18-8932-21 | CU1526 115/60 Compressors* |
| 1a | 18-8932-31 | Overload for above |
| | 18-8932-26 | CU1526 230/50 |
| 1b | 18-8932-32 | Overload for above |
| | 18-8933-21 | CU2026 115/60 |
| 1c | 18-8933-31 | Overload for above |
| | 18-8933-22 | CU2026, 208-230/60 |
| | 18-8933-26 | CU2026, 208-230/50 |
| 1d | 18-8933-32 | Overload for above |
| 2 | 03-1406-10 | Compressor mounting hardware Hex nut |
| | 03-3900-01 | Screw (up thru base) |
| | 18-0108-41 | Sleeve |
| | 18-4700-28 | Grommet |
| | 03-1407-07 | Washer |
| 3 | 16-1117-24 | CU1526 thermo exp valve |
| | 16-1117-25 | CU2026 thermo exp valve |
| | 02-4406-01 | Insulation for TXV |
| 4 | 11-0493-04 | Hot gas valve, 115/60 |
| | 12-2719-01 | Coil only, 115 volt |
| | 11-0493-05 | Hot gas valve, 230/60-50 |
| | 12-2719-02 | Coil only, 230 volt |
| | 12-2733-30 | HGV rebuild kit |
| 5 | 11-0478-01 | Water regulating valve |
| 6 | 16-1063-02 | Strainer |
| 7 | 02-3319-01 | Dryer |
| 8 | 18-8869-01 | Condenser |
| 9 | 16-0355-00 | Coupling half |
| 10 | 11-0501-01 | Hi pressure cut out - WC |
| 11 | 16-1140-01 | Port cap |
| | 16-1139-01 | Core |
| | 16-1138-01 | Seat |

* Compressors include overload, run capacitor, PTCR and dryer.


CU1526, CU2026, CU3030 Service Parts

Зип Общепит

CU1526 and CU2026 Ice Making Area

vsezip.ru

+7(812)987-08-81

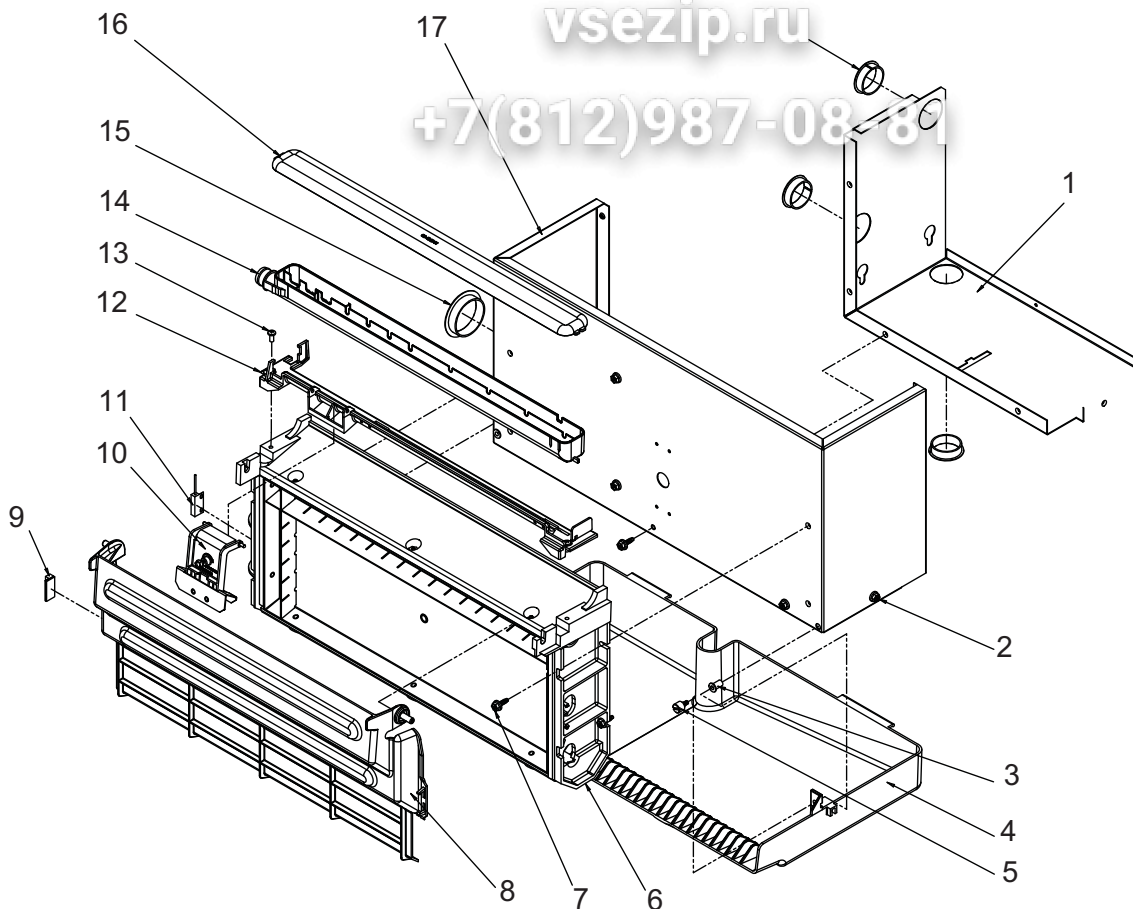

| Item Number | Part Number | Description |
|-------------|-------------|-----------------------------|
| 1 | A39090-001 | Support |
| 2 | 03-3868-01 | Screw |
| 3 | 03-1692-01 | Insert |
| 4 | 02-4315-01 | Reservoir |
| 5 | 03-3909-01 | Shoulder screw |
| 6 | A38626-021 | Evaporator, small cube |
| | A38626-022 | Evaporator, med cube |
| 7 | 03-3868-01 | Screw |
| 8 | 02-4307-01 | Curtain - no mag |
| 9 | 11-0563-05 | Magnet |
| 10 | A39031-021 | Ice thickness sensor |
| 11 | 11-0563-04 | Curtain switch |
| 12 | 02-4205-01 | Mounting bracket |
| 13 | 03-1403-15 | Screw |
| 14 | 02-4064-01 | Water distributor |
| 15 | 12-1213-15 | Snap bushing |
| 16 | 02-4065-01 | Water distributor cover |
| 17 | A39091-001 | Evaporator mounting bracket |


CU1526, CU2026, CU3030 Service Parts

Зип Общепит

CU1526 and CU2026 Electrical

vsezip.ru

+7(812)987-08-81

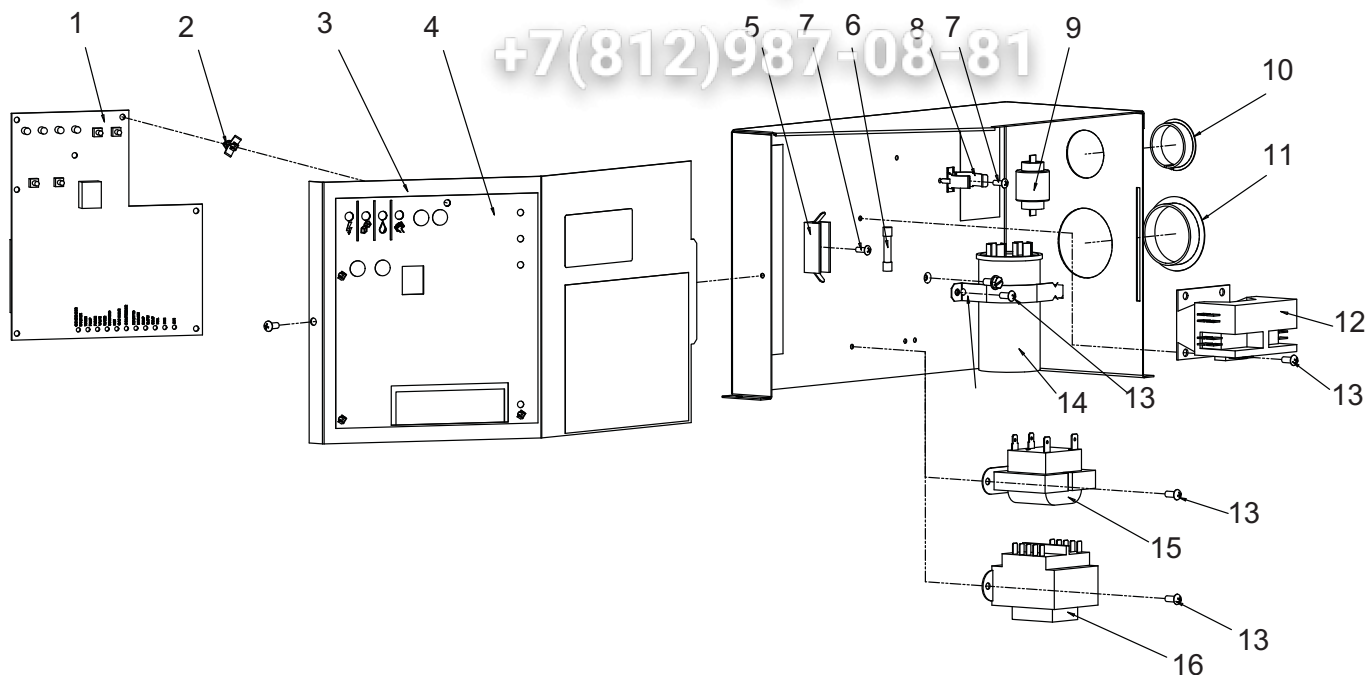

| Item Number | Part Number | Description |
|-------------|-------------|-------------------------------------|
| 1 | 11-0550-27 | Controller |
| 2 | 03-1727-02 | Stand off |
| 3 | A39081-001 | Control box cover |
| 4 | 02-4302-01 | Overlay |
| 5 | 12-2687-01 | Fuse block, 50 Hz only |
| 6 | 12-2686-01 | Fuse, 50 Hz only |
| 7 | 03-1638-06 | Screw |
| 8 | 18-8835-02 | Bracket, PTCR |
| 9 | 18-8835-01 | PTCR |
| 10 | 12-1213-13 | Snap bushing |
| 11 | 12-1213-15 | Snap bushing |
| 12 | 12-2469-03 | Contactator, 115/60 |
| | 12-2469-02 | Contactator, 230/60-50 |
| 13 | 03-1531-01 | Screw |
| 14 | 18-1902-52 | Run capacitor, for all but CU2026-6 |
| | 18-8878-01 | Run capacitor, CU2026 50 Hz |
| 15 | 12-2924-01 | Transformer, 115 to 12 |
| | 12-2924-02 | Transformer, 60 Hz, 230 to 12 |
| 16 | 12-2639-01 | Transformer, 50 Hz, 230 to 12 |

Not Shown

| | | |
|------|------------|--------------------------------------|
| NS1 | 12-2959-01 | High voltage harness - 60 Hz |
| NS2 | 12-2988-01 | High voltage harness - 50 Hz |
| NS3 | 12-2931-01 | Control power harness - 60 Hz |
| NS4 | 12-2944-01 | Control power harness - 50 Hz |
| NS5 | 12-1638-14 | Power cord, 115/60 |
| NS6 | 12-1638-18 | Power cord, 208-230/60 |
| NS7 | 12-1638-22 | Power cord, 230/50 |
| NS8 | 12-3020-01 | Harness, On/Off switch to connector* |
| NS8A | 12-3020-02 | Harness, item NS8 to transformer* |
| NS9 | 12-2936-01 | Fan motor harness |

* Early harness was one piece, changed Sept 08 to include a connector. Order both NS8 and NS8A to replace early harness.