


Зип Общепит

vsezip.ru


7(812)987-08-81

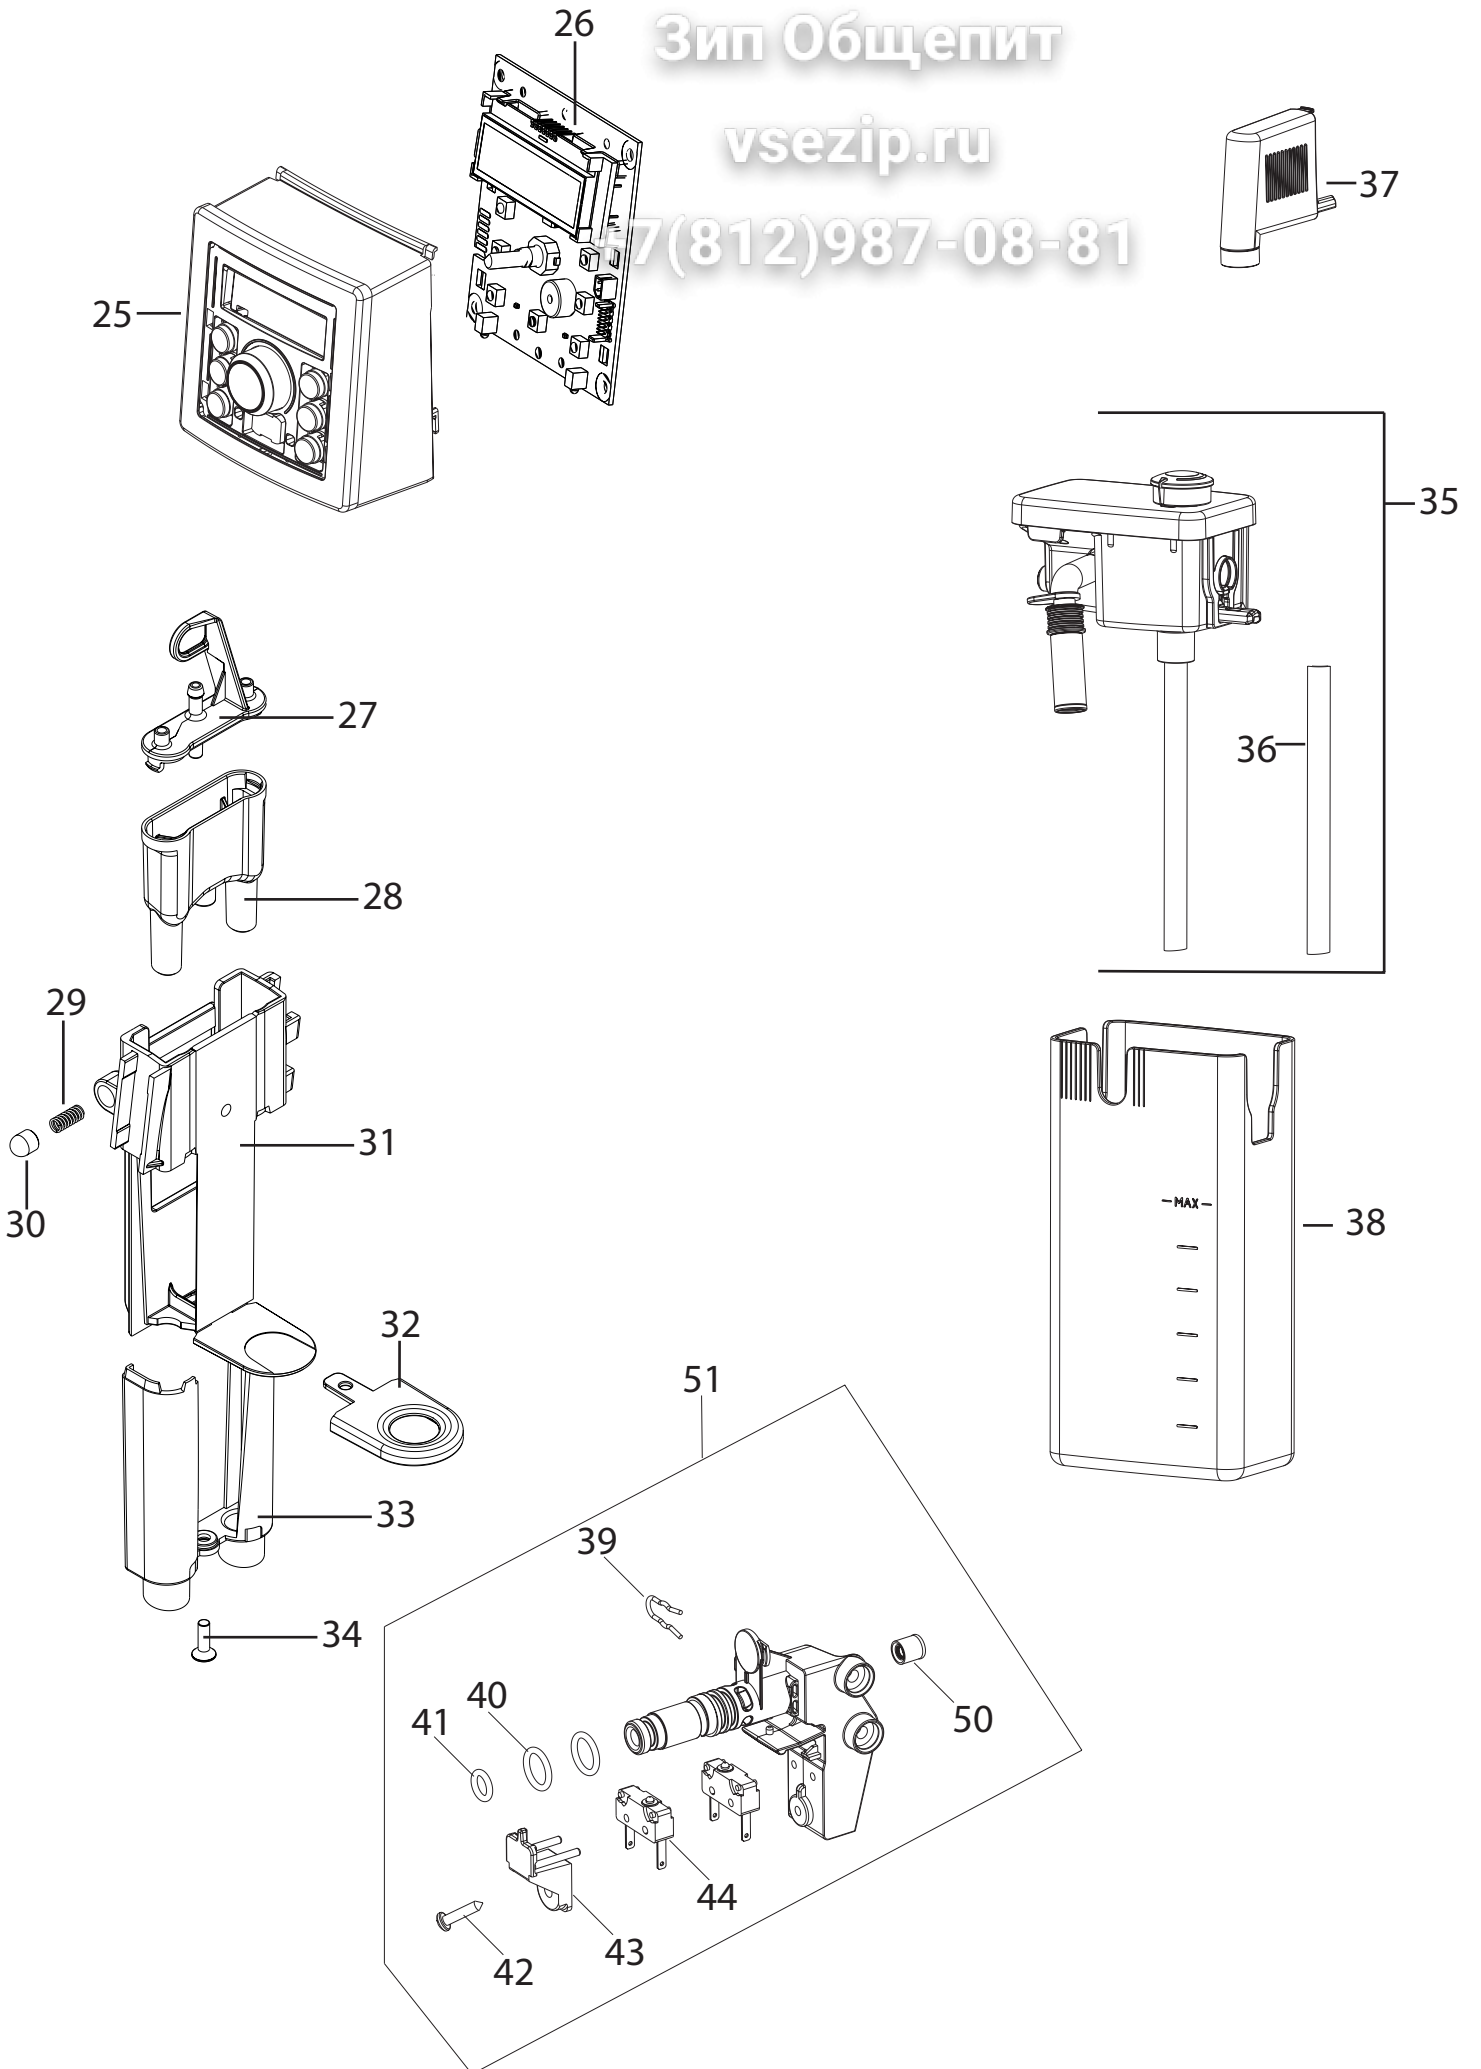

Зип Общепит

ysezip.ru




+7(812)987-08-81

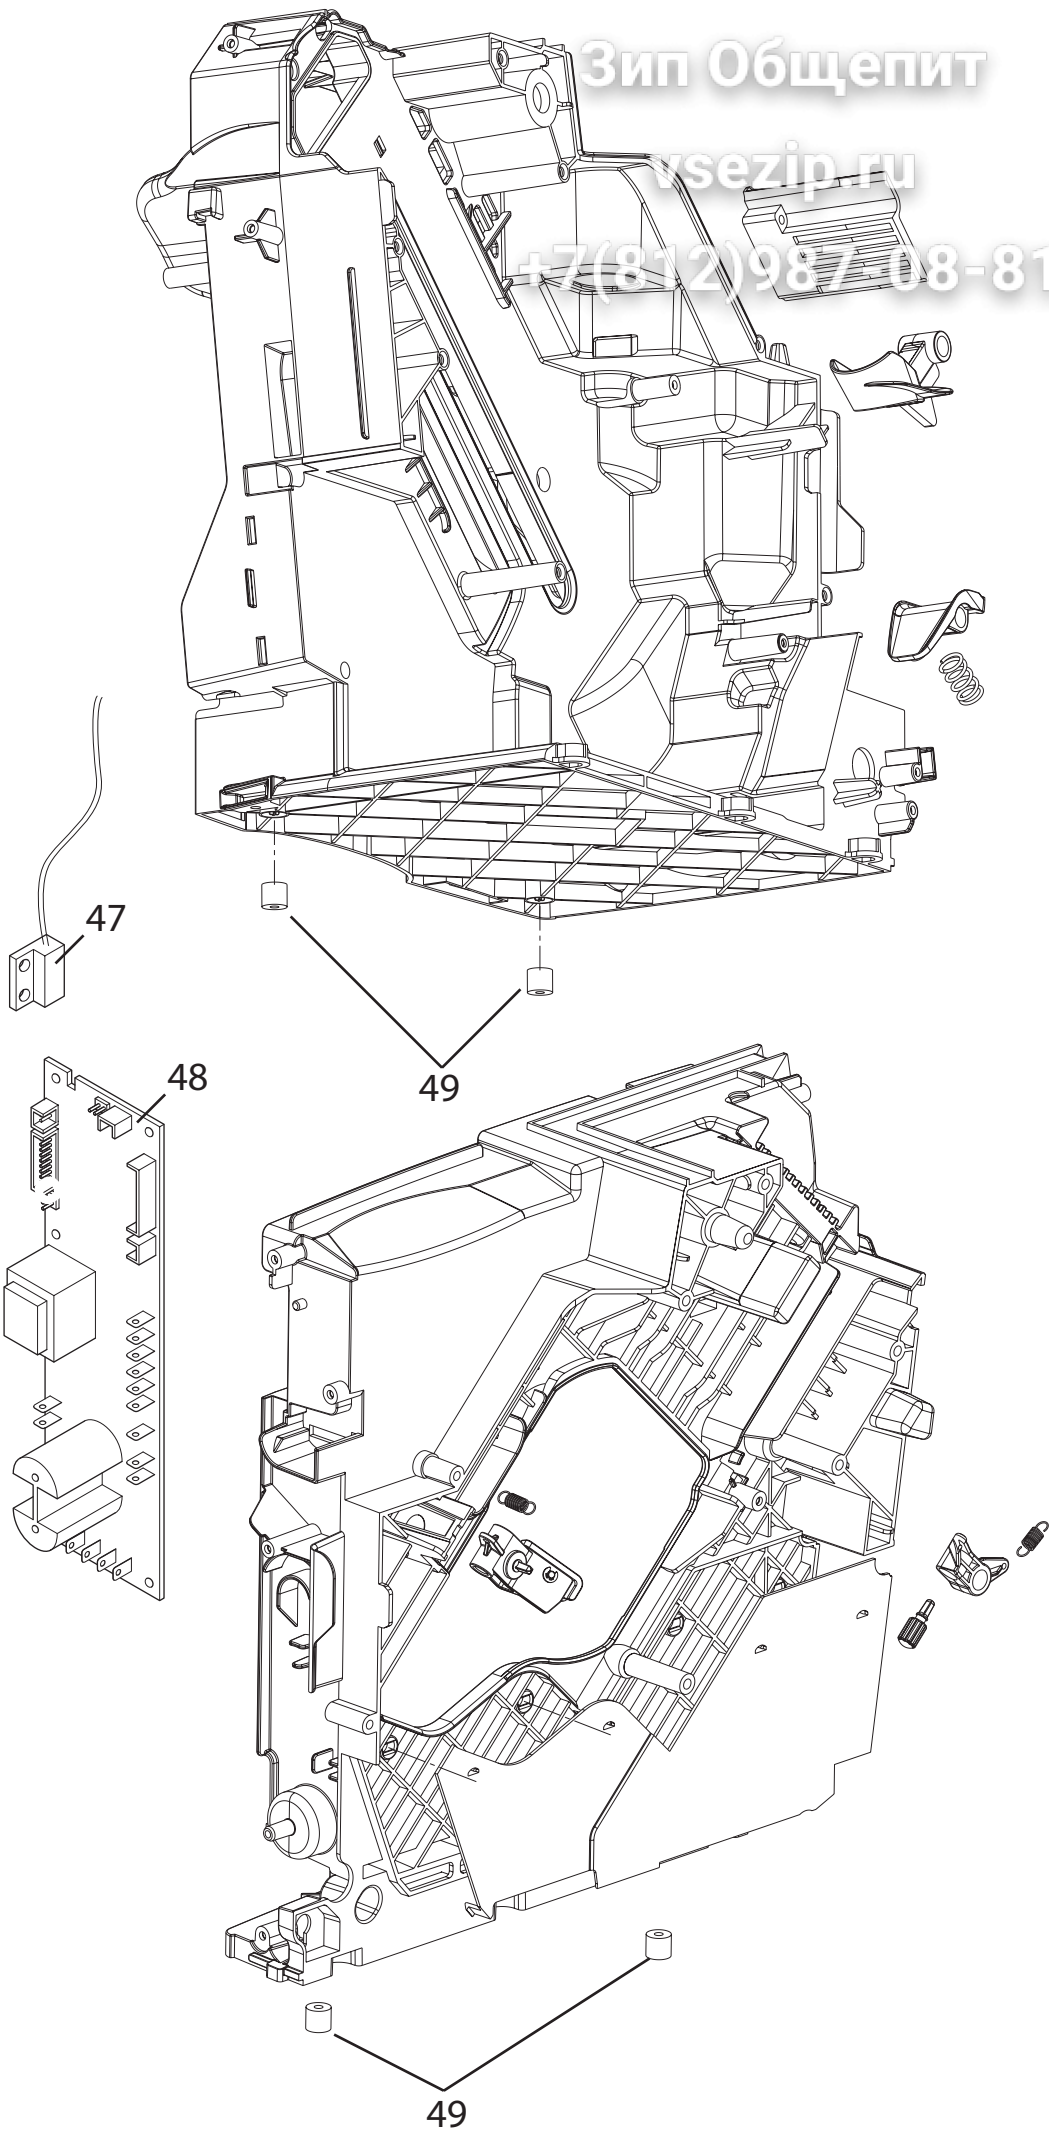

Зип Общепит

vsezip.ru







+7(812)987-08-81

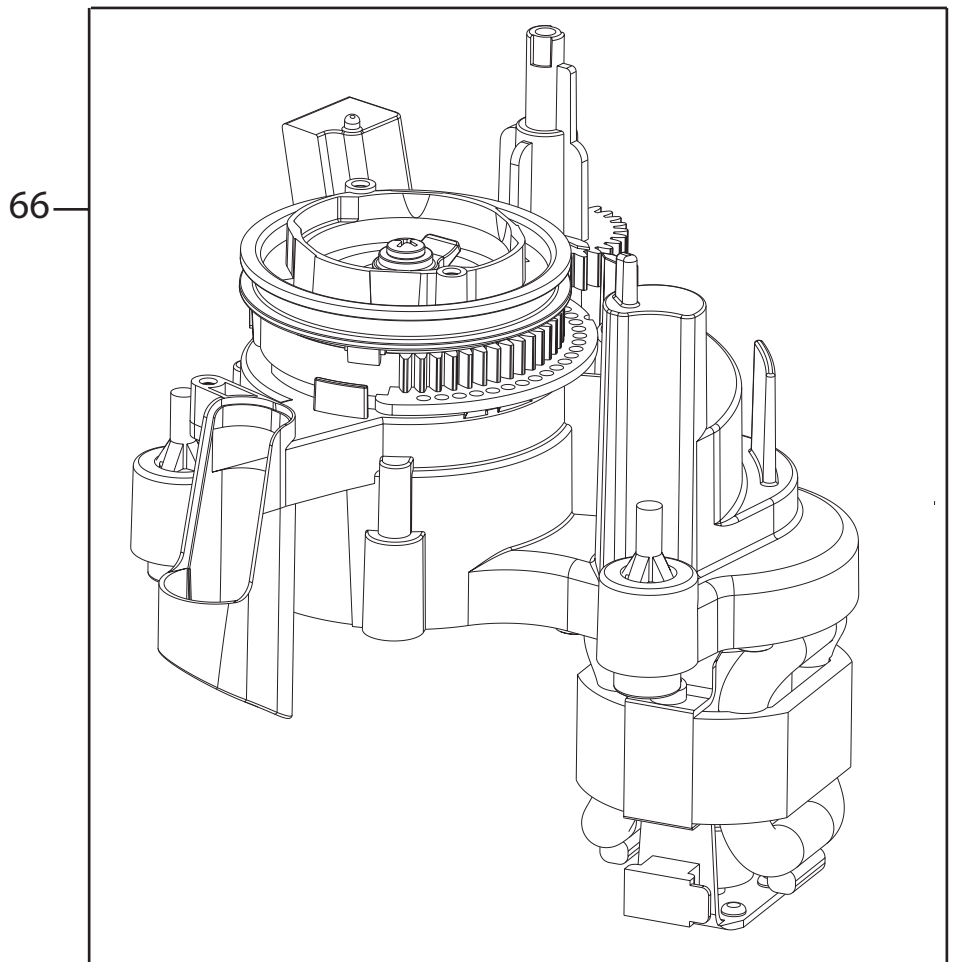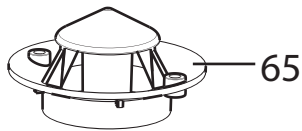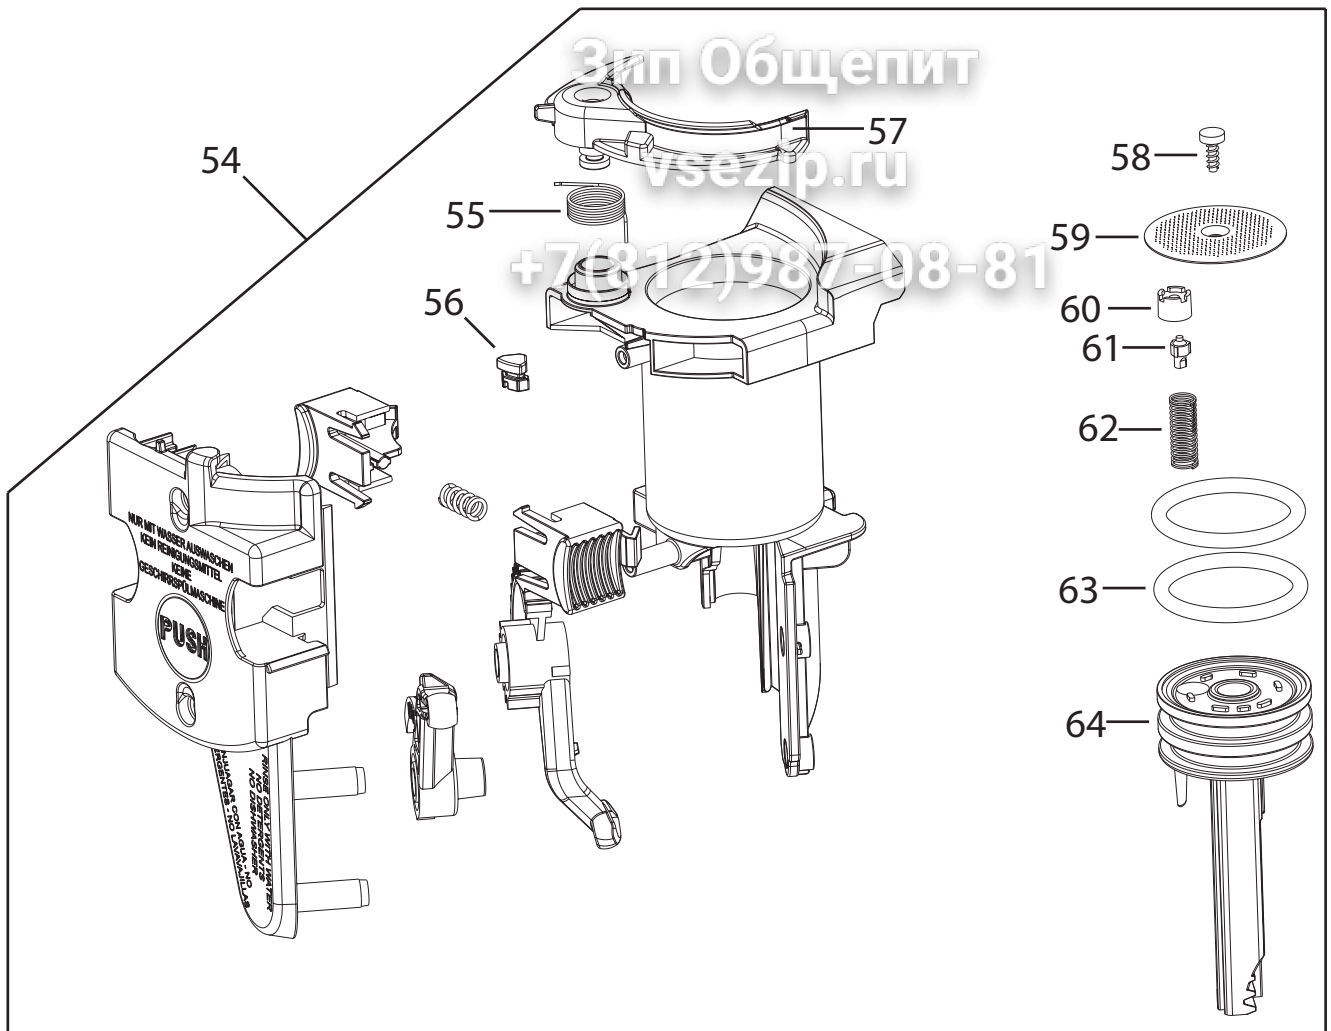

Зип Общепит

vsezip.ru

+7(812)987-08-81

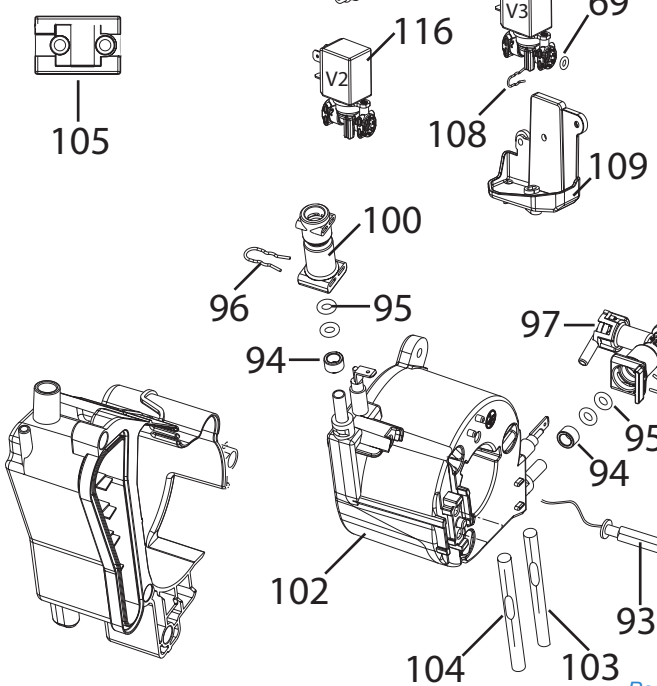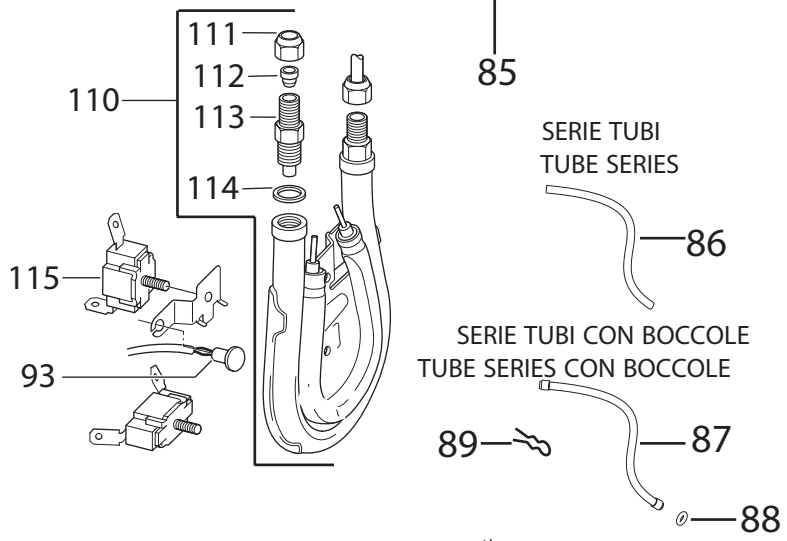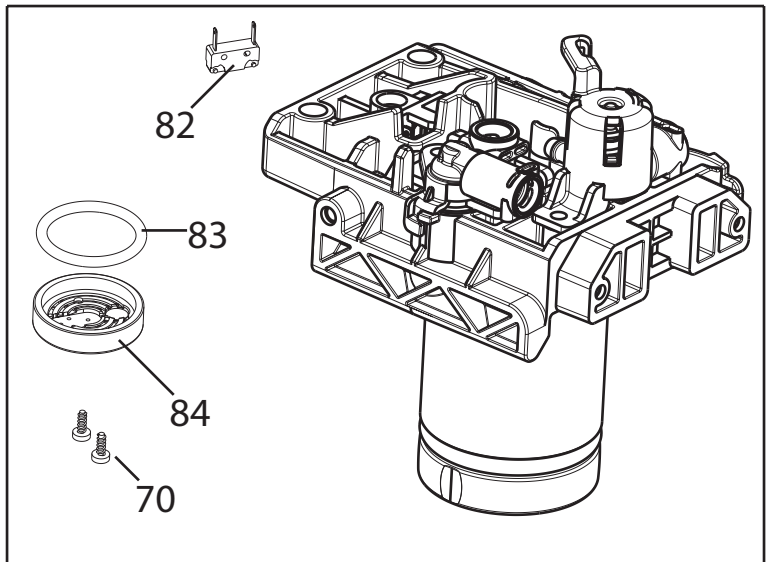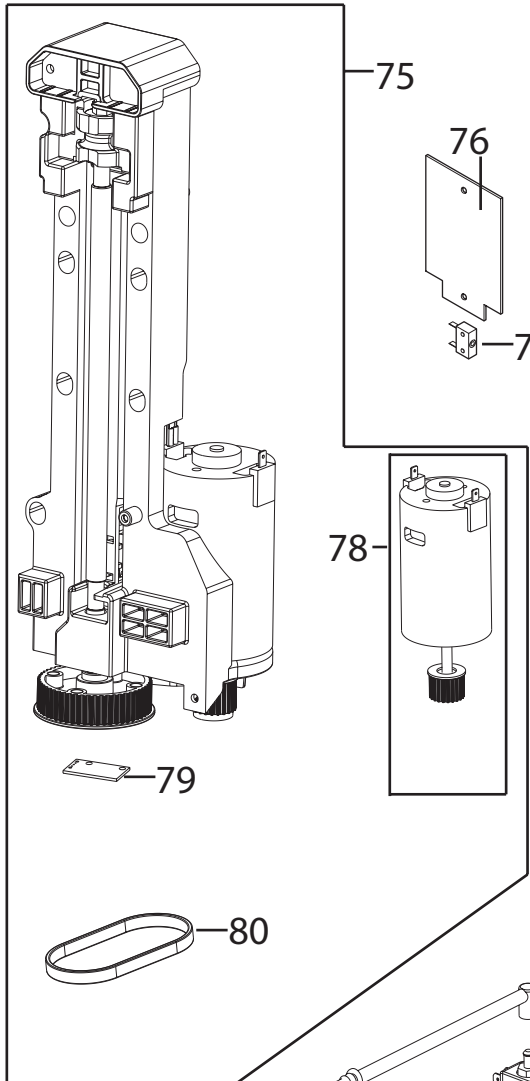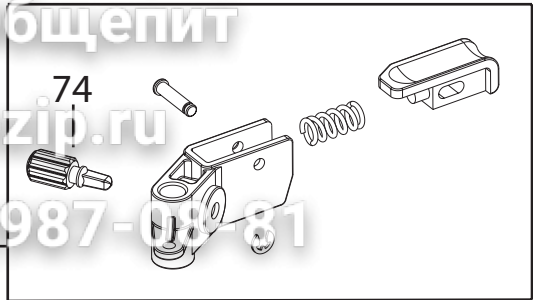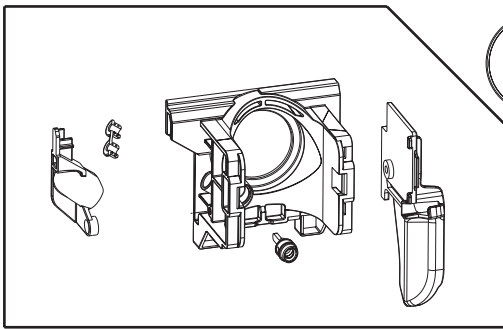

Зип Общепит

Position	Code	description
	5332169200	MEASURING SPOON
	5032111900	POWER SUPPLY CORD
	5313247361	COVER
	5332224100	MOTOR BELT GRINDER
	5313213411	DOOR
	5513211891	PENNELLO-RASCHIETTO+SETOLE NERO(PP) ECAM
	6113210111	STAFFA TCO(ACC.C70) (GENERATORE) ECAM
	6113210121	STAFFA SENSORE(ACC.C70) (GENERATORE)ECAM
	IT0198	ADDITIONAL PARTS FOR CHASSIS
	IT0198_	ADDITIONAL PARTS FOR CHASSIS
	5313213451	WIRE CLAMP
001	5313221031	COVER DUST
002	5513214851	COVER
003	7313226971	COVER ASSEMBLY
004	5913212611	KNOB
005	5313231671	REAR PANEL
006	5313231681	SIDE LEFT
007	5313219211	TANK
008	5313223081	INSULATOR
009	5313213441	SWITCH HOLDER
010	5313231661	SIDE RIGHT
011	5313213321	COVER
012	7313212611	TANK
013	5313215251	FRONT PIECE
014	5313223071	DRAWER
015	5313231651	FRONT PIECE
016	6013210511	CUP PLATE
017	5313231641	TRAY
018	5313222641	FLOAT
019	5132112500	SWITCH
021	5313213551	TRAY
025	7313226991	CONTROL PANEL W-O PCB DISPLAY
026	5513220041	PCB LCD(IFD-16L C/DE)+SUPP DISP EX3 ECAM
027	5313213911	COVER
028	5313213901	TANK

Зип Общепит

029	6132106200	SPRING
030	5332227400	REGULATOR
031	5313213881	COVER
032	5313215321	HANDLE
033	5313215311	DUCT
035	7313221801	COVER
036	5332131100	TUBE
037	5513213511	PIPETTE
038	5313231231	CARAFE
039	6132101300	CLIP
040	5313220031	O-RING
041	5313221011	O-RING
042	9813421316	SCREW
043	5313218821	SUPPORT MICROSWITCH
047	5232104600	SENSOR REED
048	5213213921	POWER BOARD 230V
049	5313224721	FOOT
050	5313220131	RUBBER PAD
051	7313244781	COUPLING CARAFE
054	5513227891	DIFFUSER KIT
055	6113210131	SPRING
056	5313213241	RUBBER PAD
057	5313213191	LEVER
058	9812631250	SCREW
059	6013213181	FILTER
060	5332139600	STOPPER
061	5332139500	VALVE
062	6132112200	SPRING
063	5332149100	O-RING
064	5313213211	PISTON
065	5313227651	COVER
066	7313230521	COMPLETE GRINDER
067	5313236711	TUBE 90°
068	5213218421	SOLENOID VALVE
071	5313213591	STOPPER
072	7313212631	TROLLEY
073	7313214521	REGULATOR
074	5313213431	RUBBER PAD

Зип Общепит

075	5513228011	TRANSMISSION KIT (ECM)
076	5213215001	MOTOR BOARD (ECM)
077	5132110500	MICROSWITCH
078	7313217261	ASS. GR NDS (ECM)
079	5213213981	SENSOR BOARD
080	5313243071	BELT
082	5132104100	MICROSWITCH
084	5313217601	FILTER
085	5513227961	MECHANICS VALVE
086	5313217861	TUBE DI=3 DE=5,5 L=145
086	5313217871	TUBE DI=3 DE=6 L=200
086	5332199500	TUBE (SIL NAT)DI=4 DE=8 L=150
087	5513212871	TUBE PTFE DI2-DE4 L=97 2BUSHES
087	5513212881	TUBE PTFE DI2-DE4 L=270 2BUSHES
087	5513212901	TUBE PTFE DI2-DE4 L=290 2BUSHES
087	5513213901	TUBE PTFE DI2-DE4 L=320 2BUSHES
087	5513219871	TUBE PTFE L=460 NUT 1BUSHE
088	5313217701	O-RING D=3,85
090	5113211311	PUMP
091	5513211371	REGULATOR
092	5313230671	SUPPORT
093	5213215671	SENSOR NTC
094	5332239300	SPACER 5XD5.2XD7.9 NATURAL
095	5313228791	GASKET
096	6113210021	CLIP
097	7313219401	SAFETY VALVE
098	5113210211	MICROSWITCH
099	5213214671	FLOWMETER
100	5332239200	CONNECTOR
101	5213211161	PROTECTOR
102	5513214291	GENERATOR
103	5013252541	WIRING TCO
104	5013252961	WIRING TCO
105	5513214661	SLIDER
109	5313224491	SUPPORT
110	IT0286	SEE TECNICAL INFORMATION
111	6213210351	NUT
112	6213211521	BUSH

Зип Общепит

113	6113212051	CONNECTION
114	6113210741	CONNECTION
115	5213216261	TCO
116	5213218311	SOLENOID VALVE

vsezip.ru

(812) 987-08-81